




HL05 Operation Instruction

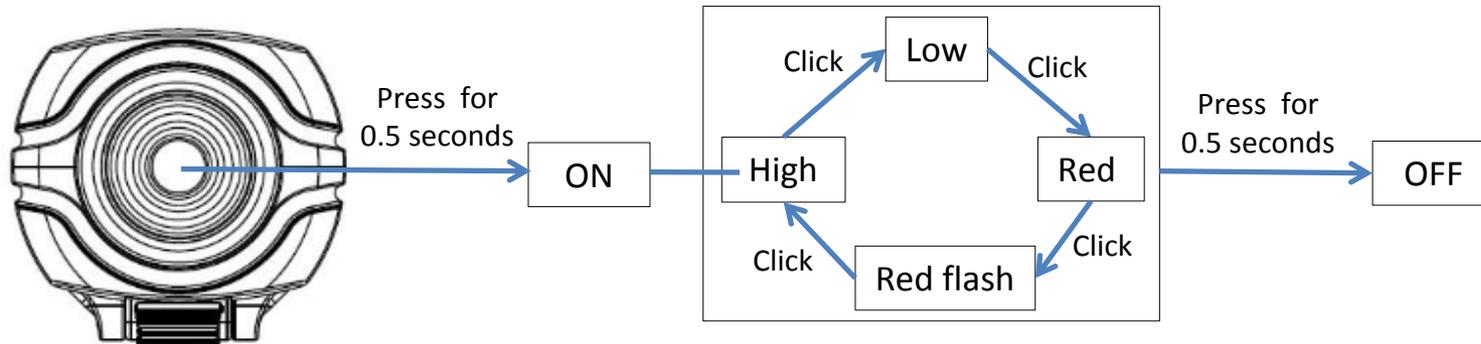


① Open the headlamp base

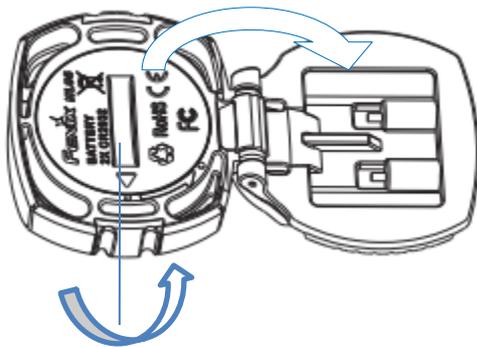

③ Insert two CR2032 batteries

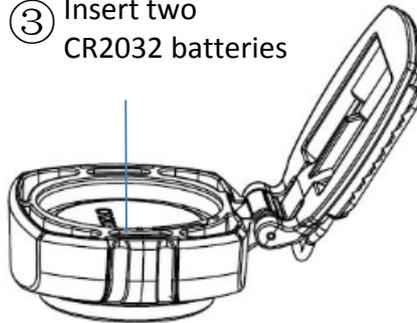

② Use headlamp buckle or one coin to insert the battery cover slot, contrarotate about 45 degree to open the battery cover.

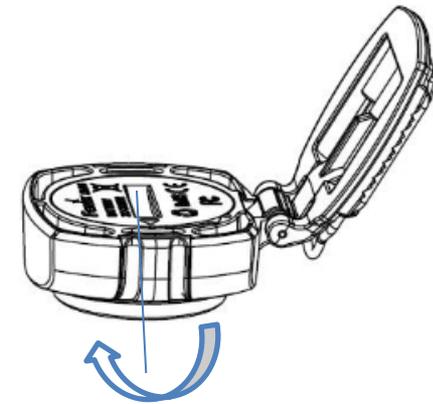

④ Screw clockwise the battery cover tight with a coin or the headlamp buckle.