

# **Evaluation Kit**

## **APPLICABLE PARTS (SOLD SEPARATELY)**

- PA02
- PA03
- PA04
- PA05
- PA76
- PA81
- PA82
- PA83
- PA84

#### INTRODUCTION

This kit provides a solid mechanical platform with good shielding and grounding to breadboard eight pin TO-3 packages or the MO-127 package with 0.060" pins. This kit is not intended as an alternate for kits dedicated to specific amplifiers. See www.apexanalog.com for availability of dedicated kits.

Construction will involve surface mounting and 3D techniques. Holes are provided to mount standard banana and BNC connectors for I/O. See the Apex Microtechnology Accessories Information data sheet for a selection of flat-back heatsinks and thermal washers for these packages.


Note that HS11 is compatible with EK09 and all three sockets can be used if desired. If the EK09 is to be used as an MO-127 platform only, HS18 rated at 1° C/W is a cost effective alternative to HS11 if internal power dissipation permits. Lower cost alternatives for two package TO-3 applications are HS02, HS01, and HS09. For single package TO-3 applications the HS13 is also suitable. The six chip capacitors provided can be used as the critical first step in power supply bypass for dual supplies for all three sockets. These capacitors are rated at 200V.

#### **PARTS LIST**


Reference	Manufacturer Part #	Description	QTY
	PB99-P2	Тор	1
	PB99-P6	Side	2
	PB99-P7	End	2
	329015153427100	Pin Receptacle-0.032-0.046 dia.	2 (8/pk)
	364015151327100	Pin Receptacle-0.048-0.064 dia.	1 (12/pk)
	1825B105K201N	Cap, 1μF, 200V, 10%-R	6



Figure 1: Components Included in EK09

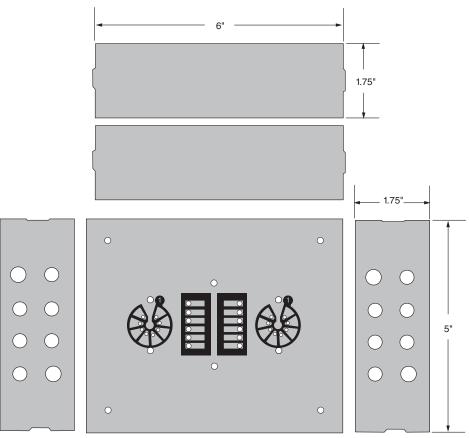

Component side

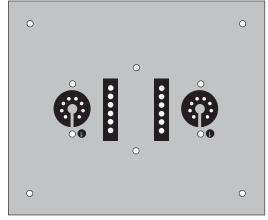

Amplifier side

- 2 MS02,16 CAGE JACKS FOR TWO TO-3 SOCKETS
- MS04,12 CAGE JACKS FOR ONE MO-127 SOCKET
- OX7R105KWN, 6 CAPACITORS, 1µF, 200V



#### **BEFORE YOU GET STARTED**

- Attempt to visualize the finished circuit mechanically and in terms of where the high currents flow.
- Use proper ESD precautions.
- Verify heatsink is adequate.
- Use thermal grease or Apex Microtechnology thermal washer.
- Do not make or break any connection on a hot circuit.
- Start with lowest rated voltages.
- Checking for oscillations with an oscilloscope is a must.

## **ASSEMBLY**

Let us define the side of the top board with solder pads for each pin (roughly triangular on the TO-3 sockets) as the component side, where all the support components will determine circuit function and will be inside the finished box. The other side of this board is hereby dubbed the amplifier side.

Insert cage jacks from the amplifier side and solder. Consider one of these techniques: 1) Place cage jacks in holes, cover with one of the 6" copper sides, flip over and solder, or 2) place cage jacks on pins of the amplifier, insert and solder. If done carefully, technique 2 can be used for the MO-127 package with 0.040" leads.

Starting with one short and one long side, locate a vertical square corner in your work area (a large heat-sink standing on end works fine) and solder the two together. Repeat for the other two sides, and finally solder the two pairs together. With the component side up, place rectangle of sides on top and tack two opposite corners. When satisfied with alignment, solder the box together then add connectors and components as desired.

Note that copper on the inside and on the top of the box will all be tied to ground. Copper on the four outer sides of the box will be floating unless you tie them down.

Soldering a stranded #10 to #16 ground wire from the immediate area of the socket(s) to the ground connector of the power supply(ies) is good construction practice. If the circuit is not a bridge, run this same size wire from the socket area to the output return connector. This will avoid high currents in the ground plane which may destroy signal integrity or even an amplifier. This is a good time to think about star grounding where each ground connection has a dedicated path to the center of the star such that currents in any path are not capable of inducing voltage in any other path.

Note that the layout makes it easy to locate the star center nearly coincident with the socket center.

Auxiliary circuits may be mounted inside the box in 3-D fashion supported on ground connections or on daughter boards as convenient. Other style connectors, switches or indicators can easily be added by simply drilling the appropriate holes and mounting them.



Figure 2: External with heatsink (heatsink, amplifier, connectors and switches not supplied).

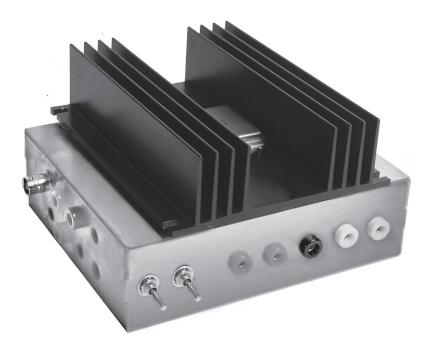


Figure 3: Inside of assembled box. Holes for components on long side were user drilled.





Figure 4: Socket detail shows the center of the star ground system is right in the center of the socket.



### **NEED TECHNICAL HELP? CONTACT APEX SUPPORT!**

For all Apex Microtechnology product questions and inquiries, call toll free 800-546-2739 in North America. For inquiries via email, please contact apex.support@apexanalog.com. International customers can also request support by contacting their local Apex Microtechnology Sales Representative. To find the one nearest to you, go to www.apexanalog.com

#### IMPORTANT NOTICE

Apex Microtechnology, Inc. has made every effort to insure the accuracy of the content contained in this document. However, the information is subject to change without notice and is provided "AS IS" without warranty of any kind (expressed or implied). Apex Microtechnology reserves the right to make changes without further notice to any specifications or products mentioned herein to improve reliability. This document is the property of Apex Microtechnology and by furnishing this information, Apex Microtechnology grants no license, expressed or implied under any patents, mask work rights, copyrights, trademarks, trade secrets or other intellectual property rights. Apex Microtechnology owns the copyrights associated with the information contained herein and gives consent for copies to be made of the information only for use within your organization with respect to Apex Microtechnology integrated circuits or other products of Apex Microtechnology. This consent does not extend to other copying such as copying for general distribution, advertising or promotional purposes, or for creating any work for resale.

APEX MICROTECHNOLOGY PRODUCTS ARE NOT DESIGNED, AUTHORIZED OR WARRANTED TO BE SUITABLE FOR USE IN PRODUCTS USED FOR LIFE SUPPORT, AUTOMOTIVE SAFETY, SECURITY DEVICES, OR OTHER CRITICAL APPLICATIONS. PRODUCTS IN SUCH APPLICATIONS ARE UNDERSTOOD TO BE FULLY AT THE CUSTOMER OR THE CUSTOMER'S RISK.

Apex Microtechnology, Apex and Apex Precision Power are trademarks of Apex Microtechnology, Inc. All other corporate names noted herein may be trademarks of their respective holders.