Panasonic







Introducing a range of new safety devices!

Panasonic Industrial Devices SUNX offers comprehensive safety solutions through an extensive selection of safety devices and a robust support system.



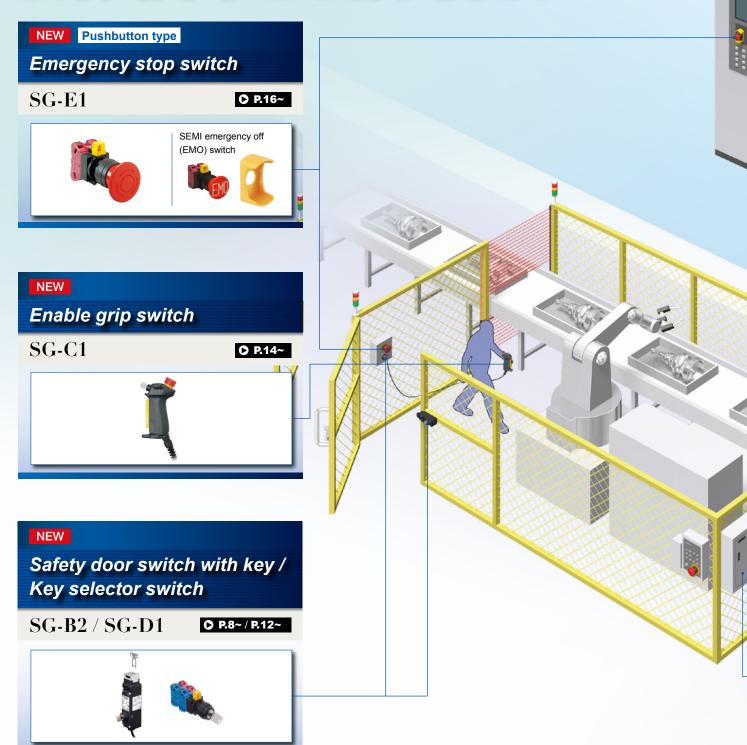

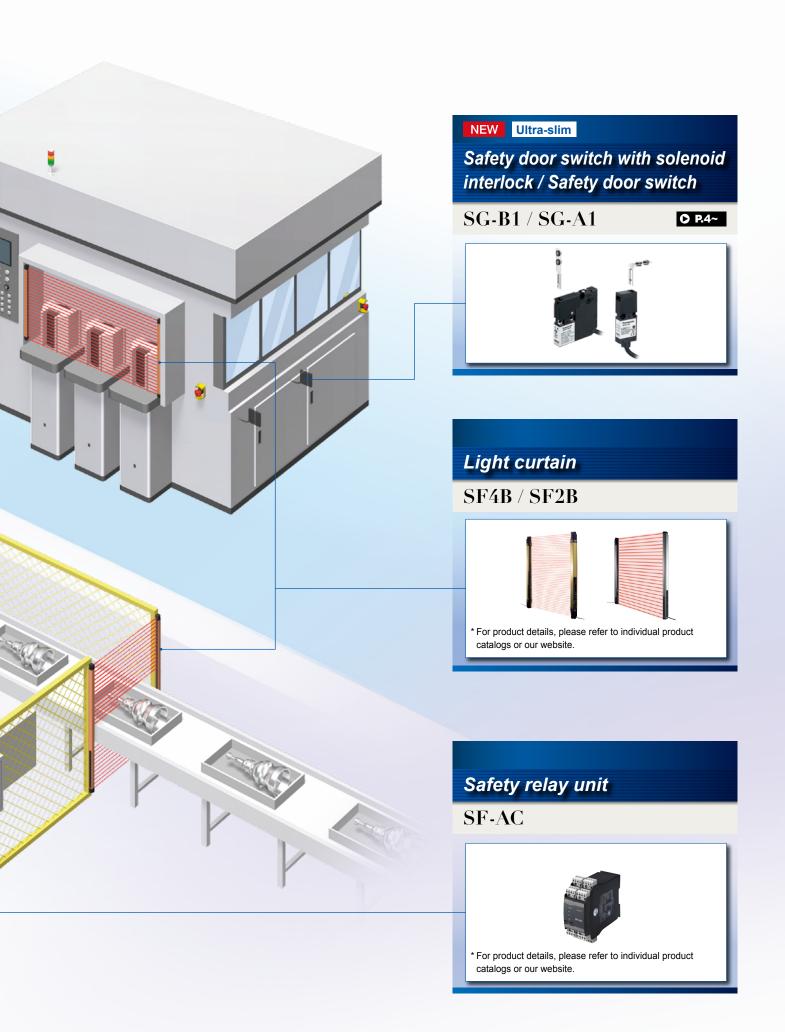







Safety door switch

SG-A1 Ultra-slim





Connectable safety relay units



SF-AC Supports up to control category 3
• 2NC inputs, safety output × 3

■ Order guide P.7
■ Contact configuration / P.18
Operating patterns
■ Specifications P.19
■ Precautions for proper use P.20~
■ Dimensions P.22~


Introducing a safety door switch with solenoid interlock that is among the world's thinnest*! With 5 built-in contacts *Based on research conducted by our company as of March 2013.



Manual lock release can be operated from three directions.




Space saving design with angled connection cable

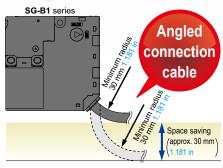

All models come with cables pre-installed.

The **SG-B1** series and **SG-A1** series ship with bundled cables already connected internally. Since there is no need to provide cables separately, and because they are already connected internally, the number of wiring man-hours is cut in half.

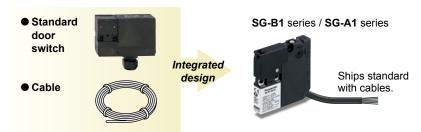

Energy-saving design


The **SG-B1** series features an energy-saving design requiring current consumption of just 110 mA at 24 V DC (100 mA for the solenoid and 10 mA for the indicator), even though it also incorporates a solenoid interlock.




Low power consumption of 110 mA

Can be installed on any door.


Sliding doors

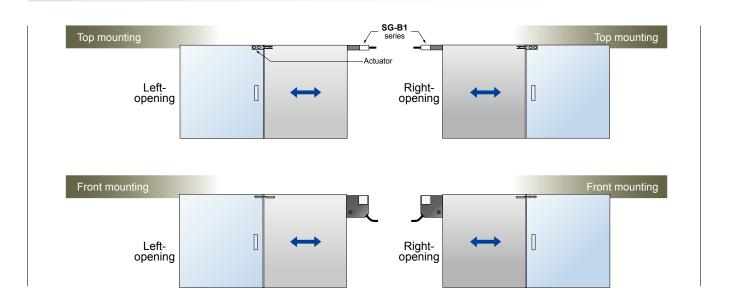

Hinged doors

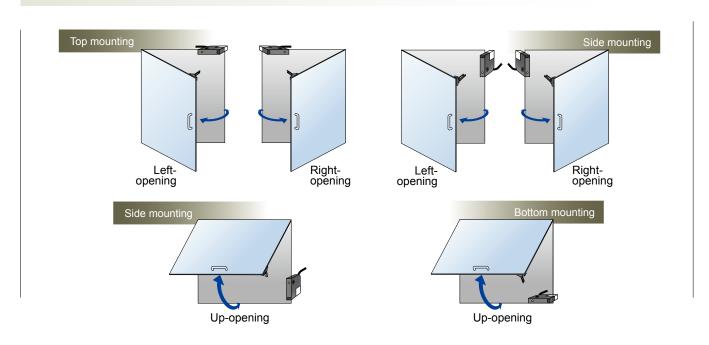

SG-B1 series

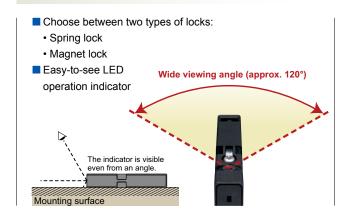

SG-A1 series


Features three built-in contacts yet is among world's smallest designs.
 Choose from two actuator entry slot orientations.


Dimensions (Unit: mm in)






Mounting hole layout (Unit: mm in)

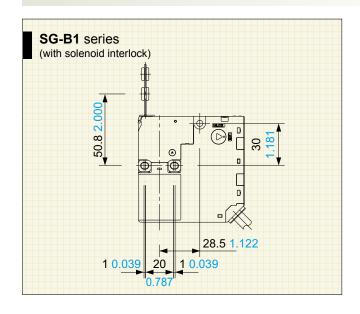

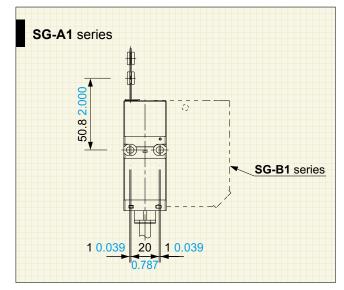

Common actuators

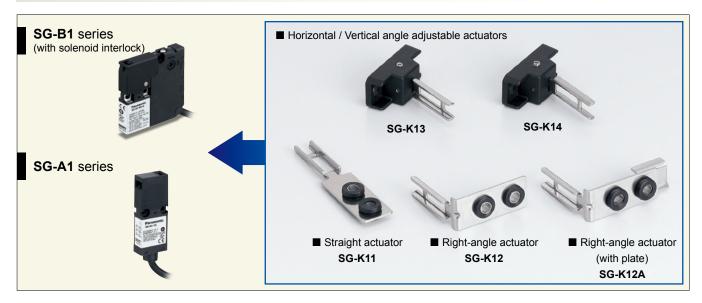

Order guide

Safety door switch with solenoid interlock

Actuators are not included with door switches and must be purchased separately.

Туре	Interlock force	Main contacts	Door monitor contacts	Lock monitor contacts	Cable length	Model No.
			1NC	1 m 3.281 ft	SG-B1-SA-G1	
Spring				INC	5 m 16.404 ft	SG-B1-SA-G5
lock type	1NO			4110	1 m 3.281 ft	SG-B1-SB-G1
		INO	5 m 16.404 ft	SG-B1-SB-G5		
	500 N or more	500 N or more 1NC + 1NC	2NC 1NC	1 m 3.281 ft	SG-B1-MA-G1	
Magnet lock type				INC	5 m 16.404 ft	SG-B1-MA-G5
				1NO	1 m 3.281 ft	SG-B1-MB-G1
					5 m 16.404 ft	SG-B1-MB-G5

Safety door switch

Actuators are not included with door switches and must be purchased separately.

Door monitor contacts	Cable length	Model No.
2NC	1 m 3.281 ft	SG-A1-02-1
ZNC	5 m 16.404 ft	SG-A1-02-5
2010 + 4010	1 m 3.281 ft	SG-A1-12-1
2NC + 1NO	5 m 16.404 ft	SG-A1-12-5
3NC	1 m 3.281 ft	SG-A1-03-1
	5 m 16.404 ft	SG-A1-03-5

Actuators

Actuators are not included with door switches and must be purchased separately.

Туре	Model No.
Straight actuator	SG-K11
Right-angle actuator	SG-K12 (Note 1)
Right-angle actuator (with plate)	SG-K12A
Horizontal / vertical angle	SG-K13
adjustable actuators (Note 2)	SG-K14

- Notes: 1) The right-angle **SG-K12** actuator's tensile strength is 100 N. Using the device with a load in excess of this value may cause it to fall off the door. If you anticipate that the tensile load during use will exceed 100 N, use the right-angle (with plate) **SG-K12A**.
 - Choose a model after verifying the required direction of operation based on the relationship between the door and safety switch. (Refer to p.21)



Safety door switch with key SG-B2



Connectable safety relay units



SF-AC Supports up to control category 3

• 2NC inputs, safety output × 3

Order guide
 P.10
 Options
 P.11
 Contact configuration / Operating patterns
 Specifications
 Precautions for proper use
 Dimensions
 P.26~
 P.28~


Solve issues related to machine safety and other safety measures with a safety door switch with key!








The safety door switch with key **SG-B2** series locks and unlocks doors with keys. When an operator takes a key into a hazardous area, the safety door switch will not lock, and the equipment will stop, ensuring operator safety by preventing personnel from being closed inside the hazardous area and preventing equipment from starting to operate.

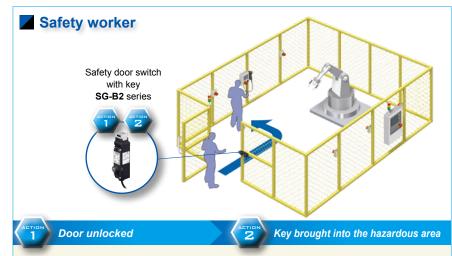

Hazards of the system and robot are isolated by the safety guard. The worker uses the key to unlock the door and disables the system from starting unexpectedly, then removes the key and brings it into the hazardous area. The system remains off until the worker walks out the door and locks the door with the key. This enables the worker carrying the key to work safely in the hazardous area.

Additionally, the key selector switch **SG-D1** series can be used to switch equipment modes and unlock door locks with a single key.

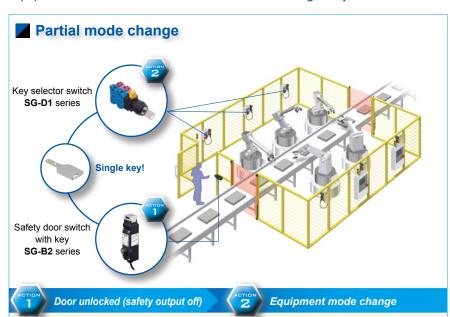

Hazards of the system and robot are isolated by the safety guard. When a worker needs to work inside the hazardous area for maintenance, the worker unlocks the safety guard using a key, disables the system from starting (1), removes the key and brings it into the hazardous area, and then changes the operation mode of each system to maintenance mode (2). While the worker is carrying out maintenance work in the hazardous area, the safety guard cannot be locked and the system cannot be turned on. This enables the worker to work safely in the hazardous area.

Energy-saving design, no power supply required

Since doors are locked and unlocked with a key, there is no need to supply power to the safety door switch.

Head removal detection function

Head removal detection function is employed in the **SG-B2**. With this innovative function, the monitor circuit (41-42) turns off when the head is removed from the switch, such as when removing the head to change the head direction.

With the head installed on the switch, monitor circuits 41-42 and 51-52 operate in synchronization while the key locks / unlocks the actuator. When the head is removed, 41-42 turns off and 51-52 turns on.

This disagreement is detected by the head removal detection function.



Monitor circuit	Actuator unlocked	Actuator locked	When the head removed				
LOCK Wunlock Monitor circuit (NC) Pink → 41 42 Pink / White	OFF	ON	OFF				
Monitor circuit (NC) Brown ⊖ 51 52 Brown / White	OFF	ON	ON				
Note: Head removal detection function is not direct opening							

Note: Head removal detection function is not direct opening


High-security pin tumbler key types are used



All models come with cables pre-installed.

Double-insulated design eliminates the need for grounding wires.

Choose an actuator based on the door shape and application.

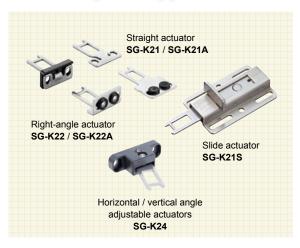


Available with rear unlocking button



Models with a rear unlocking button allow the door to be unlocked from the inside in the event a worker is left in the hazardous area.

Equipment combination examples related to machine safety





Safety door switch with key

Actuators are not included with door switches and must be purchased separately.

Rear unlocking button	Contact arrangement (Note)	Cable length	Key removal position	Model No.
			A (removable in all positions)	SG-B2-K2AC-5
	Monitor circuit : Blue → 11 + 12 Blue / Monitor circuit : White Pink → 41 + 42 Pink / Monitor circuit : Orange 23 24 Orange / White	5 m 16.404 ft	B (removable in UNLOCK position)	SG-B2-K2BC-5
VA/:the cust	Monitor circuit : Orange 23 24 Orange / White Monitor circuit : White Brown 53 54 Brown / White		C (removable in LOCK position)	SG-B2-K2CC-5
Without	Monitor circuit : Blue		A (removable in all positions)	SG-B2-K2AD-5
	Monitor circuit : White Pink → 41 + 42 Pink / White Monitor circuit : Orange → 21 + 22 Orange / White Monitor circuit : Brown → 51 + 52 Brown /	5 m 16.404 ft	B (removable in UNLOCK position)	SG-B2-K2BD-5
	White		C (removable in LOCK position)	SG-B2-K2CD-5
	Monitor circuit : Blue		A (removable in all positions)	SG-B2-K2AD-L5
With	Monitor circuit : White Pink → 41 + 42 Pink / Monitor circuit : Orange → 21 + 22 Orange / Monitor circuit : White Brown → 51 + 52 Brown /	5 m 16.404 ft	B (removable in UNLOCK position)	SG-B2-K2BD-L5
	White		C (removable in LOCK position)	SG-B2-K2CD-L5

Note: The contact configuration shows the status when the actuator is inserted and the switch is locked. Key LOCK and UNLOCK positions are as shown on the right.

Switches incorporate two detents so that they stop in each position.



Actuators

Actuators are not included with door switches and must be purchased separately.

Туре	Description	Model No.
Straight actuator		SG-K21
Straight actuator with rubber bushings		SG-K21A
Slide actuator	The actuator tensile strength when using this product is 1,400 N.	SG-K21S
Right-angle actuator		SG-K22
Right-angle actuator with rubber bushings		SG-K22A
Horizontal / vertical angle adjustable actuators	The actuator tensile strength when using this product is 500 N.	SG-K24

Note: When using a safety door switch with key on a hinged door, see page 27 for more information about the minimum door radius with which the switch can be used.



• SG-K21



• SG-K21S




















Options

Туре	Model No.
Padlock hasp (Note 1)	SG-PH2
Mounting plate (for mounting on an aluminum frame)	MS-SG-21
Description butter lifter a forms (Nets 2)	MS-SG-22
Rear unlocking button kit for a frame (Note 2)	MS-SG-23

Notes: 1) The shackle diameter for compliant padlocks ranges from ø5.5 to ø7.5 mm ø0.217 to ø0.295 in.



2) For more information about selecting a back manual unlock button kit for a frame, see the following table:

	Mounting part* thickness (X) (mm in)
Model No.	Rear unlocking button type When installing an SG-B2-K2 □ D-L5 with a rear unlocking button directly
MS-SG-22	33 < X ≤ 43 1.299 < X ≤ 1.693
MS-SG-23	23 < X ≤ 33 0.906 < X ≤ 1.299

^{*} The mounting part is a frame or a panel that the product is mounted on.

Padlock hasp

· SG-PH2



Mounting plate (for mounting on an aluminum frame)

• MS-SG-21



Rear unlocking button kit for a frame

- MS-SG-22
- MS-SG-23




Key selector switch SG-D1 SERIES






Key selector switch with direct open operation function Pin tumbler design for high security

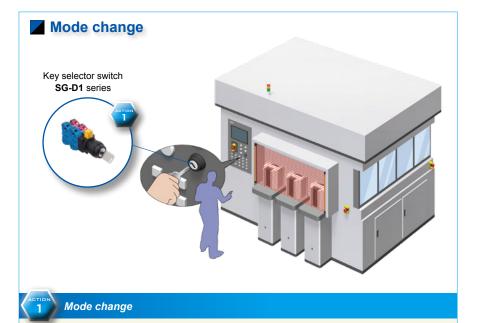

Workers can be limited by using a key selector switch to switch modes when performing maintenance and program overwrites. Additionally, since the NC contact (b-contact) use direct open operation, the circuit will be reliably shut off by forcibly separating the NC contact, even if they have melted together.


Use in combination with the safety door switch with key SG-B2 series to enable hostage control.

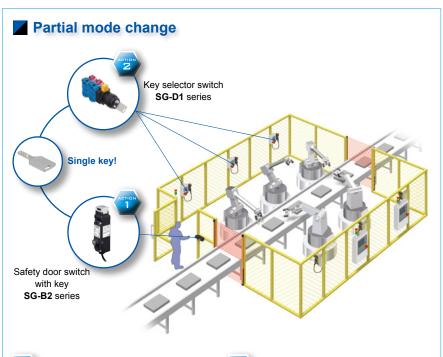

Door unlocked (safety output off)

Hazards of the system and robot are isolated by the safety guard. When a worker needs to work inside the hazardous area for maintenance, the worker unlocks the safety guard using a key, disables the system from starting (1), removes the key and brings it into the hazardous area, and then changes the operation mode of each system to maintenance mode (2). While the worker is carrying out maintenance work in the hazardous area, the safety guard cannot be locked and the system cannot be turned on. This enables the worker to work safely in the hazardous area.

Mode change



Key selector switch

Docition	Contact	Contac	t block	Operator	r position	Model No.	Key removal position
Position	configuration	Mounting position (Note)	Contact	1	2	Model No.	
	1NO / 1NC	1	NO		•	SC D4 3444	A: All positions
	(11)	2	NC	•		SG-D1-2A11	
		1	NO		•		
	2NO / 2NC	2	NC	•		SG-D1-2A22	(1) (2)
	(22)	3	NO		•	3G-D1-2A22	
		4	NC	•			
Maintained	1NO / 1NC	1	NO		•	CC D4 2D44	B: Left position (Not removable in right position
1 2	(11)	2	NC	•		SG-D1-2B11	
		1	NO		•		
(Manual)	2NO / 2NC	2	NC	•		SG-D1-2B22	
90 degree,	(22)	3	NO		•	SG-D1-2B22	
2-position		4	NC	•			<u> </u>
	1NO / 1NC	1	NO		•	SC D4 2044	C: Right position
	(11)	2	NC	•		SG-D1-2C11	/Not removable in \
		1	NO		•		left position
	2NO / 2NC	2	NC	•		00.04.000	0 2
	(22)	3	NO		•	SG-D1-2C22	
		4	NC	•			, v

Note: Contact blocks are attached as shown below:



Options

Туре	Model No.	Description
Locking ring wrench	SG-ET1	Used to tighten the locking ring when installing the unit onto a panel. Material: Brass Weight: approx. 150 g * Tighten the locking ring to a torque of 2.0 N·m.

Locking ring wrench




Enable grip switch SG-C1 SERIES





Compact, light weight grip switches designed to fit comfortably in the hand

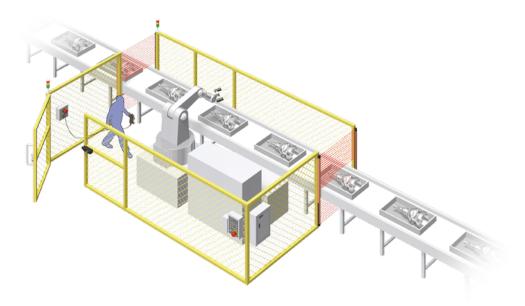

This product line includes models with control units suited to a variety of applications.

The compact, light weight grip profile was designed based on human engineering considerations.


The compact profile fits the hand perfectly, ensuring comfortable operation. Thanks to its light weight design (**SG-C1-21**: approx. 140 g) and compact size, it is easy to hold even for individuals with small hands, and it can also be used in confined work locations.

Reduced impact during extended operation

We reduced the impact during extended operation by lowering the holding load in position 2 (ON).

Pleasant, clear button operation

Tactile clicking feedback allows easy recognition of switch operation when shifting from position 1 (contact OFF) to position 2 (contact ON).

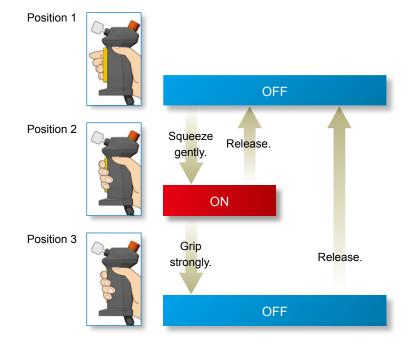


Order guide

Enable grip switch

	Contact configuration								
3 position	Push	Additional control units			Rubber boot material /	Wiring	Model No.		
enabling switch	monitor switch	Emergency stop switch	Control unit (A)	Control unit (B)	Indicator (green) (C)	Color style	STVIE	Woder No.	
		Without					SG-C1-21		
		\\/;4F (ONIO)	Without		Without	Silicone rubber /	Solder terminal	SG-C1-21-E	
0		with (ZNC)	vvitn	With				SG-C1-21-EG	
2 contacts		Momentary	Momentary		(Yellow) (Note)	SG-C1-21-MM			
			pushbutton switch	pushbutton switch (2c)	Without			SG-C1-21-EMM	
		With (2NC)					SG-C1-21-EMK		


Additional control unit layout



Note: Silicone rubber: Can be used in general factories. Remains flexible in cold temperatures. Suitable in applications with a wide operating temperature range.

Contact configuration / Operating patterns

Grip switch (during operation of center of the rubber boot)

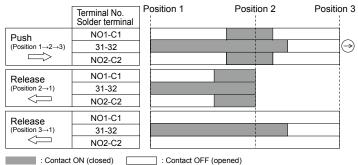

Push monitor switch: 0, 1 contacts: pin No.: 31-32 (SG-C1-21)

3 position enabling switch: 2 contacts; pin No.: NO1-C1, NO2-C2

Note: Push monitor switch (terminal No.31-32) will be positive opening circuit () when the switch operates from position 2 to 3. Use contacts of terminal No. NO1-C1 and NO2-C2 for the output of enabling system.


The above operating characteristics illustrate the performance when the center of the rubber boot is pressed. Pressing the edge activates one of the two 3 position enabling switches inside earlier than the other, and may cause a delay in the operation.


Key selector switch

Operator position & contact operation (top view)								
Position	Key removal position							
Maintained 1 2	Removable in all positions	Left contact NO1 NC1 C1	Right contact NO2 NC2 C2	Left contact NO1 NC1	Right contact NO2 NC2 C2			

Indicator

Pay attention to the polarity of the power supply as SG-C1-21-EG do not contain a diode for protection against reverse polarity.









SEMI emergency off (EMO) switch Pushbutton type






■ Order guide P.17 ■ Options P.17 ■ Specifications P.33 ■ Precautions for proper use P.33 ■ Dimensions P.34

Push to lock, turn to reset

Switches feature simple operation: Push the pushbutton to lock the switch, and turn the switch in the direction shown by the arrow to reset it.

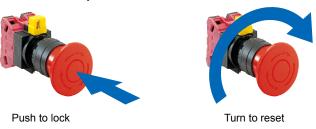

The product line includes a SEMI emergency off (EMO) switch.





SEMI semiconductor industry safety standards

SEMI standards comprise a series of guidelines put together by an industry group consisting of manufacturers of semiconductor manufacturing equipment, flat-panel displays, and associated materials. In the semiconductor industry, this guidelines have achieved the status of de facto international standards.

Section 12.1 of the SEMI standards (S2 0706) states, "Equipment should incorporate an emergency off (EMO) circuit. When the EMO actuator (button) is triggered, the equipment should transition to a safe state in which no new hazard is posed to workers or equipment." This provision likely stems from the need to address the possibility of secondary hazards that could occur when processing power and other inputs are stopped, reflecting the industry's extensive use of materials such as solvents and chemicals, many of which contain hazardous or toxic substances. Consequently, SEMI standards require that normal emergency stop switches, which shut off the supply of energy, including power, be augmented with separate emergency off switches that shut off only the portion of the load that created the hazardous state while maintaining operation of other safety-related equipment (smoke detectors, gas / water leak detectors, pressure measurement equipment, etc.).

When there is the possibility that the emergency off switch could be operated mistakenly, a guard must be installed and the switch must use direct opening operation. The button must be red with a yellow background, and the switch itself must include the letters "EMO."

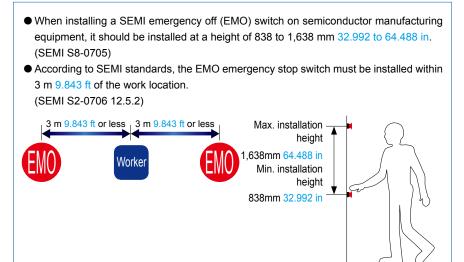



Emergency stop switch

Туре	Contact configuration	Button color	Model No.
Pushlock	2NC	Dad	SG-E1-02
Turn reset	1NO / 2NC	Red	SG-E1-12

SEMI emergency off (EMO) switch

Туре	Main contacts (NC contacts)	Monitor contacts (NO contacts)	Button color / text color	Model No.		
Pushlock	2NC —		Dod / White	SG-E1-02-E		
Turn reset	2NC	1NO	Red / White	SG-E1-12-E		

Options

Туре	Model No.	Description							
Emergency stop nameplate	SG-EP1		(Blank)	Background: Yellow Legend: Black					
	SG-EP2	egend	EMERGENCY STOP	Applicable panel thickness: 0.8 to 4.5 mm					
	SG-EP3		非常停止 (Japanese)	0.031 to 0.177 in Material: Polyamide					
Locking ring wrench	SG-ET1	ont Ma	o a panel. terial: Brass, Weig	ocking ring when installing the unit ght: approx. 150 g ring to a torque of 2.0 N·m.					
SEMI guard ring	MS-SG-GR1	For SEMI emergency off (EMO) switches. Specifically designed for use with semiconductor manufacturing equipment.							

Emergency stop nameplate

•SG-EP1 •SG-EP2 •SG-EP3







Locking ring wrench

· SG-ET1



●Caution

SEMI guard rings are designed specifically for use with semiconductor manufacturing equipment and should not be used as emergency stop switches for machine tools, food processing machinery, or other equipment.

The European Machinery Directive, IEC 60204-1, JIS B9960-1, and other standards require that emergency stop switches be easy to approach and operate, and use of SEMI standard-compliant switch guards is not currently approved.

SEMI guard ring

· MS-SG-GR1







Contact configuration / Operating patterns

Safety door switch with solenoid interlock

0		Status 1	Status 2	Status 3	Status 4	Unlocking using manual unlocking key	
Sai	fety switch status		• Door closed • Machine ready to operate • Solenoid de-energized	• Door closed • Machine cannot be operated • Solenoid energized	Door open Machine cannot be operated Solenoid energized	• Door open • Machine cannot be operated • Solenoid de-energized	Door closed Machine cannot be operated Solenoid de-energized
Door status				######################################			Manual unlocking position
Do	or		•Closed (locked)	•Closed (unlocked)	•Open	•Open	•Closed (unlocked)
	Spring lock type SG-B1-SA-□ Magnet lock type	Main circuit 11-42					
	SG-B1-MA-□ Door monitor Lock monitor (At actualor entry) (When solenoid off)	Door monitor circuit (door closed) 21-22					
ation	(+) (-) (-) A2 (-) A1 A1 A1 A1 A2 A1 A2	Door monitor circuit (door closed) 31-32					
onfigur	Main circuit: ⊕11+ 12 41+ 42 Monitor circuit: ⊕21+ 22 51+ 52 Monitor circuit: ⊕31+ 32	Lock monitor circuit (locked) 51-52					
ontact c	Spring lock type SG-B1-SB-□ Magnet lock type	Main circuit 11-42					
and co	SG-B1-MB-□	Door monitor circuit (door closed) 21-22					
Model No. and contact configuration	Main circuit: ⊕11 + 12 41 + 42	Door monitor circuit (door closed) 31-32					
M	Monitor circuit: ⊕21+ 22 53 54 Monitor circuit: ⊕31+ 32	Lock monitor circuit (unlocked) 53-54					
	Spring lock type Solenoid power A1-A2 (same for	Spring lock type Solenoid power A1-A2 (same for all models)			•ON (energized)	•OFF (de-energized)	•OFF (de-energized)
	Magnet lock type Solenoid power A1-A2 (same for	all models)	•ON (energized)	•OFF (de-energized)	•OFF (de-energized)	•ON (energized) (Note 2)	•OFF (de-energized) to ON (re-energized) (Note 1) (Note 2)

Main circuit: Connected to the machine drive control circuit, sending the interlock signals of the protective door. Monitor circuit: Sends the monitoring signals of open / closed and lock / unlocked statuses of the protective door. Notes: 1) Do not attempt manual unlocking while the solenoid is energized.

2) Do not energize the solenoid for a long period of time while the door is open or while the door is unlocked manually.

Operation characterist (reference)					: Contact OFF (operace position)	ned) SG-B
SG-B1-SA-□	Approx.	1.1	0.043 (Loc		oo pooliion,	SG-E
SG-B1-MA-□	App	rox. 4	4.7 0.185 pprox. 5.0 0.197	App	prox. 27.4 1.079 (Travel: mm in)	
Main circuit (11-42)					(Travel. Illili III)	Main ci
Door monitor circuit (21-22)						Door m
Door monitor circuit (31-32)						Door m
Lock monitor circuit (51-52)						Lock m
(Actuator co	l mnlataly i	200	rtod) (Act	tuatar	 	

SG-B1-SB-□ SG-B1-MB-□	O (Actuator mounting reference position) Approx. 1.1 0.043 (Lock) Approx. 4.7 0.185 Approx. 27.4 1.079 (Travel: mm in)					
Main circuit (11-42)						(Havel: Hill III)
Door monitor circuit (21-22)						
Door monitor circuit (31-32)						
Lock monitor circuit (53-54)						
(Actuator co	mplete	ly i	nse	ted) (Act	tuator	pulled out)

: Closed : Open

- The operation characteristics show the contact status when the actuator enters an entry slot of an safety switch.
 The operation characteristics shown in the chart above are of the SG-K11 / SG-K12 / SG-K13 and SG-K14 actuators. For the SG-K12A actuator, subtract 0.6 mm 0.024 in.

Safety door switch

Salety door st	MILCH							
Model No.	Conta	ct configuration	Operation characteristics					
SG-A1-02-□	2NC	11 1 12 ⊖ 31 3 32 ⊖	0.8 0.031 (Actuator mounting reference position) 0)				
SG-A1-12-□	2NC + 1NO	11	11-12 : Contact OFF (opene 33-34 : : : : : : : : : : : : : : : : : : :	∍d)				
SG-A1-03-□	3NC	11	11-12 21-22 31-32 (Actuator completely inserted) (Actuator pulled out)					

key

Specifications

	Designation	Safety	⁄ d	oor switch wit	h soler	oid inte	erlock	
Ite	m Series	SG-B1 series						
	plicable indards	EN 1088, IEC 60947-5-1, EN 60947-5-1, GS-ET-19, UL 508, CSA C22.2 No.14						
Sid	Standards for use	IEC 60204-1, EN 60204-1						
Ap	plicable	Machinery directive (2006/42/EC)						
	ectives			ow voltage dire				
	Ambient			-13 to +122 °F (No dev			g allowed)	
ondi	temperature	Storage	e: -	-40 to +80 °C -4		76 °F		
ding (Ambient humidity			45 to 85	% RH			
Operating condition	Pollution degree Altitude			3 (Insid 2,000 m 6,561				
		300 V	(D	oor monitor circu		іах.		
	ted insulation tage (Ui)	150 V	(M	ain, Lock monitor	r circuit)	olenoid	circuit)	
	pulse	2.5 kV	(D	oor monitor circui	it)			
	hstand voltage			lain, Lock monitor				
(Uı	mp)			etween ground a				
The	ermal current			emperature: °C -13 to +95 °F	35 to +50	t temper	+122 °F	
(Ith				to 2 circuits)		1 circui		
`		1.0 A (3 o	r more circuits)	0.5 A (2	or more	circuits)	
		le		Ue		125 V	250 V	
Ra	ted	Main	S	Resistive load (AC-12) Inductive load (AC-15)	-	2 A	-	
	erational	circuit, look monitor				1 A	-	
vol	tage (Ue) /	circuit	2	Resistive load (DC-12) Inductive load (DC-13)	2 A 1 A	0.4 A 0.22 A	-	
	ted		()		-	2.5 A		
	erational rrent (le)	Door	¥	Resistive load (AC-12) Inductive load (AC-15)	-	1.5 A	0.75 A	
Cui	iterit (ie)	monitor circuit	ပ	Resistive load (DC-12)	2.5 A	1.1 A	0.55 A	
		Circuit	Δ	Inductive load (DC-13)	2.3 A	0.55 A	0.27 A	
Elect	tric shock protection class	Class II	(IE	C 61140) (Note	1), 回 (dd	ouble ins	sulated)	
	erating frequency			900 operation		r		
Actu	uator operating speed			0.05 to 1.0				
B ₁₀	0d	(IS	2,000,0 O 13849-1 Anne		ble C.1)	
Med	chanical durability	1,000,000 operations min. (GS-ET-19)						
				00 operations n				
ГІс	ectrical	(900 operations/hour, AC-12 125 V 2A, DC-12 125 V 0.4 A)						
	rability	1.0)O.	,000 operations	min.	.5 V U. 4	Α,	
aa.	. a.oty	/90	00	operations/hou	r,	1		
				' AC/DC 0.1 A re				
	erlock force		50	0 N min. (GS-E				
	ect opening travel			8 mm 0.315		-		
	ect opening force Intact	300 m		60 N n nax. (initial valu		2 281 ft	cable)	
	sistance			nax. (initial value				
	otection			IP 67 (IEC		0		
Sh	ock resistance	Malfun	ctio	on: 100 m/s², Do		on: 1,00	00 m/s ²	
	oration			: 10 to 55 Hz, half a				
	sistance			n: 30 Hz, half ampli				
	t-circuit protective device	Us	e 2	250 V / 10 A fas		type tu	se	
	Material Enclosure: PA66 Cable UL style 2464, No.22 AWG 12-core							
	Rated operating voltage		_ :	DC 24 V 100%				
dicat	Rated current	110 mA	(s	olenoid 100 mA, L			value)	
d/h	Turn on voltage			oltage × 85 % n				
Solenoid / Indicator	Turn off voltage Rated voltage × 10 % min. (at 20 °C 68 °F)							
	Indicator			Green I				
1 A / -	eight	SG-B1-	-G	1: Approx. 220 g, S	<u>G-B1-□-0</u>	5 : Appro	x. 600 g	
	es: 1) Basic insulat							

Notes: 1) Basic insulation of 2.5 kV, 1.5 kV impulse withstand voltage is ensured between different contact circuits and between contact circuits and LED or solenoid in the enclosure. When both SELV (safety extra low voltage) or PELV (protective extra low voltage) circuits and other circuits (such as 230 V AC circuits) are used for the solenoid power and contact circuits at the same time, the SELV or PELV requirements are not met any more.

are not met any more.

2) The actuator locking strength is rated at 500 N of static load. Do not apply a load higher than the rated value.

Do not apply a load higher than the rated value.

When a higher load is expected to work on the actuator, provide an additional system consisting of another safety switch without lock (such as the SG-A1 safety switch) or a sensor to detect door opening and stop the machine.

	Designation	Safety door switch								
Ite		SG-A1 series								
	plicable		N 1088, IEC 60947-5							
sta	ndards	GS-ET-15, UL 508, CSA C22.2 No.14								
	Standards for use	IEC 60204-1, EN 60204-1								
	plicable	Machinery directive (2006/42/EC)								
	ectives Ambient	Low voltage directive (2006/95/EC) -25 to +70 °C -13 to +158 °F (No dew condensation or icing allowed)								
ndiffic	temperature	Stora	age: -40 to +80 °C -4	0 to +1	76 °F	y alloweu)				
	Ambient humidity	01011	45 to 85 °							
ratin	Pollution degree	3 (Inside 2)								
9	Altitude		2,000 m 6,561		nax.					
Imp	ulse withstand		4 kV	,						
	age (Uimp)		4 KV							
	ted insulation tage (Ui)		300 \	/						
The	ermal current)		2.5 A	A						
		le	Ue	30 V	125 V	250 V				
	ted operational tage (Ue) /	AC	Resistive load (AC-12)	-	2.5 A	1.5 A				
	ed operational	AC	Inductive load (AC-15)	-	1.5 A	0.75 A				
cur	rent (le)	DC	Resistive load (DC-12)	2.5 A	1.1 A	0.55 A				
			Inductive load (DC-13)	2.3 A	0.55 A	0.27 A				
	ctric shock tection class	Cl	ass II (IEC 61140), 🗖] (doubl	e insula	ated)				
	tection		IP 67 (IEC	60529)	-					
			Malfunction:							
5110	ock resistance		Destruction:							
	ration		nction: 5 to 55 Hz, half a							
	istance	Destr	ruction: 30 Hz, half amp	litude 1.	.5 mm 0.	059 in				
	erating		1,200 operati	ions/ho	ur					
	quency uator		·							
	erating speed		0.05 to 1.0	5 to 1.0 m/sec.						
D			2,000,0	000						
B ₁₀			(ISO 13849-1 Anne	x C Tabl	e C.1)					
	chanical ability		1,000,000 operations	`						
			000 operations min.	(AC-12	, 250 V	′ 1.5 A,				
	ctrical		2 250 V 0.2 A)	(A O/DO	04.1/4	00 4)				
aur	ability		0,000 operations min. 0 operations/hour)	(AC/DC	24 V 1	UU MA)				
Dire	ect opening travel	(1,20	8 mm 0.315	in min						
	ect opening force		60 N m		•					
	ntact	300	mΩ max. (initial value		3.281 ft	cable)				
res	istance		mΩ max. (initial value							
Short-circuit										
protective device Use 250 V / 10 A fast acting type fuse										
Conditional 50 A (250 V)										
SHOIT-CITCUIT CUITETIT										
		Enclosure: PA66 UL style 2464, No.20 AWG 6-core								
Cal	eight	SG-A	.1-□-1: Approx. 120 g, S							
VVE	igill	J-7	11-11. Applox. 120 g, 3	G-M I-∐-	. ∧µµ102	n. 420 y				



Precautions for proper use

This catalog is a guide to select a suitable product.
 Be sure to read the instruction manual attached to the product prior to its use.

- In order to avoid electric shock or fire, turn the power off before installation, removal, wire connection, maintenance, or inspection of the safety switch.
- If relays are used in the circuit between the safety switch and the load, consider the danger and use safety relays, since welding or sticking contacts of standard relays may invalidate the functions of the safety switch.
- Do not place a PLC in the circuit between the safety switch and the load. Safety and security can be endangered in the event of a malfunction of the PLC.



- Do not disassemble or modify the safety switch, otherwise a breakdown or an accident may occur.
- Do not install the actuator in a location where the human body may come in contact. Otherwise injury may occur.
- Magnet lock type is locked when energized, and unlocked when de-energized. When energization is interrupted due to wire disconnection or other failures, the safety switch may be unlocked causing possible danger to the operators. Magnet lock type must not be used in applications where locking is strictly required for safety. Perform a risk assessment and determine whether solenoid lock type is appropriate.

Both series

- Regardless of door types, do not use the safety switch as a door stop. Install a mechanical door stop at the end of the door to protect the safety switch against excessive force.
- Do not apply external force on the actuator while unlocking, otherwise the actuator may not be unlocked.
- Do not apply excessive shock to the safety switch when opening or closing the door. A shock to the safety switch exceeding 1,000 m/s² may cause damage to the safety switch.
- If the operating atmosphere is contaminated, use a protective cover to prevent the entry of foreign objects into the safety switch through the actuator entry slots. Entry of a considerable amount of foreign objects into the safety switch may affect the mechanism of the safety switch and cause a malfunction.
- Do not store the safety switches in a dusty, humid, or organic-gas atmosphere, or in an area subjected to direct sunlight.
- Use proprietary actuators only. When other actuators are used, the safety switch may be damaged.

SG-B1 series

- The locking strength is rated at 500 N. Do not apply a load higher than the rated value. When a higher load is expected, provide an additional system consisting of another safety switch without lock (such as the SG-A1 safety switch) or a sensor to detect door opening and stop the machine.
- Regardless of door types, do not use the safety switch as a door lock. Install a separate lock using a latch or other measures.
- While the solenoid is energized, the switch temperature rises approximately 35 °C 95 °F above the ambient temperature (to approximately 85 °C 185 °F while the ambient temperature is 50 °C 122 °F). Do not touch to prevent burns. If cables come into contact with the switch, use heat-resistant cables.
- Bouncing will occur on the lock monitor contact during locking and unlocking (reference value: 20 ms).

 Although the SG-K11 / SG-K12 / SG-K12A actuators alleviate shock when the actuator enters a slot in the safety switch, make sure that excessive shock is not applied. If the rubber bushings become deformed or cracked, replace with new ones.

SG-A1 series

• Cover the unused actuator entry slot using the slot plug supplied with the safety switch.

Minimum radius of hinged door


 When using the safety switch on hinged doors, refer to the minimum radius of doors shown below. When using on doors with small minimum radius, use the angle adjustable actuator (SG-K13 / SG-K14).

Note: The values indicated in the figures below assume that there is no mechanical interference between the actuator and the safety switch when the door is opened or closed. Because deviation or dislocation of hinged doors may occur in actual applications, make sure of the correct operation before installation.


When using the right-angle actuator (SG-K12 / SG-K12A)

SG-B1 series

<When the door hinge is on the extension line of the actuator mounting surface>

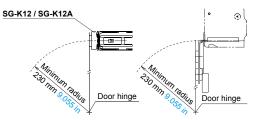


<When the door hinge is on the extension line of the safety switch surface>




SG-A1 series

<When the door hinge is on the extension line of the actuator mounting surface>



<When the door hinge is on the extension line of the safety switch surface>



switch with

Key

SG-B1series / SG-A1series


Precautions for proper use

When using the (SG-K13 / SG-K14) angle adjustable (vertical / horizontal) actuator


- When the door hinge is on the extension line of the actuator mounting surface: 70 mm 2.756 in
- When the door hinge is on the extension line of the safety switch surface: 50 mm 1.969 in

SG-B1 series

<When the door hinge is on the extension line of the actuator mounting surface>

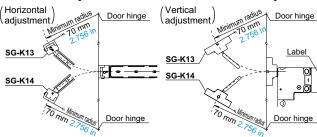


<When the door hinge is on the extension line of the safety switch surface>




SG-A1 series

<When the door hinge is on the extension line of the actuator mounting surface>

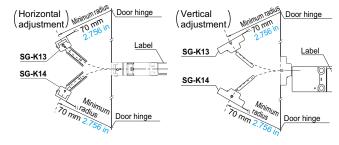

<When the door hinge is on the extension line of the safety switch surface>

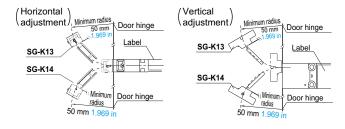

Actuator angle adjustment (vertical / horizontal)

- Using the angle adjustment screw (M3 hexagon-socket-head screw), the actuator angle can be adjusted. (refer to the dimensions on page 24)
- Adjustable angle: 0 to 20°
- The larger the adjusted angle of the actuator, the smaller the applicable radius of the door opening. After installing the actuator, open the door. Then adjust the actuator so that its edge can be inserted properly into the actuator entry slot of the safety switch.
- After adjusting the actuator angle, apply Loctite to the adjustment screw so that the screw will not move.

Mounting

 Mount the safety switch on a fixed piece of machinery or guard and the actuator on a hinged door. Avoid mounting both the safety switch and actuator on a hinged door. Doing so may cause equipment failure. For more information about how to mount the devices, see the following diagram:



Note: When mounting the actuator, make sure that the actuator neters the slot in the correct direction, as shown on the right figure.




Recommended tightening torque for mounting screws

Safety switch: 1.0 to 1.5 N·m (Three M4 screws)*
Actuator: 1.0 to 1.5 N·m (Two M4 screws)*


- *The above recommended tightening torques of the mounting screws are the values confirmed with hexagon-socket-head bolts. When other screws are used and tightened to a smaller torque, make sure that the screws do not become loose after mounting.
- · Mounting bolts must be provided by the users.
- To avoid unauthorized or unintended removal of the safety switch and the actuator, it is recommended that the safety switch and actuator are installed in a secure manner, for example using special screws or welding the screws.
- When installing the SG-K12A actuator, use the mounting plate (supplied with the actuator) on the hinged door, and mount tightly using two M4 screws.

The mounting plate has orientation. Do not lose the mounting plate. Adequate performance cannot be obtained without the plate as the actuator may fall off the door.

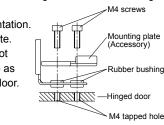

Cables

- Do not fasten or loosen the gland at the bottom of the safety switch.
- When bending the cable during wiring, make sure that the cable radius is kept at 30 mm 1.181 in minimum.
- When wiring, make sure that water or oil does not enter the cable.
- The solenoid has polarity. Make sure of the correct polarity when wiring.

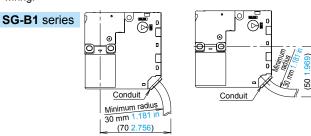






Dimensions (Unit: mm in)

SG-B1□ Safety door switch with solenoid interlock Mounting hole layout 5.5 0.217 Hole for manual unlocking 3-holes for M4 screw 10.1 0.398 ø12 ø0.472 (reference) (ø4.3 ø0.169 or M4 tapped hole) 15 5 30 20. 46.1 1.815 41.8 1.646 28.5 1.12 28.5 1.122 41.8 1.646 32 30 1 • 20 to 22 □75 2.953 Manual unlocking key (**P**) 3-holes for M4 screw Hole for manual unlocking (ø4.3 ø0.169 or M4 tapped hole) 0 ø12 ø0.472 (reference) 1 0.039 20 0.787 28.5 1.122

Note 1: Drill mounting holes so that they are properly aligned for the orientation in which the safety switch will be used.

20 to 22

41.8 1.64<u>6</u>

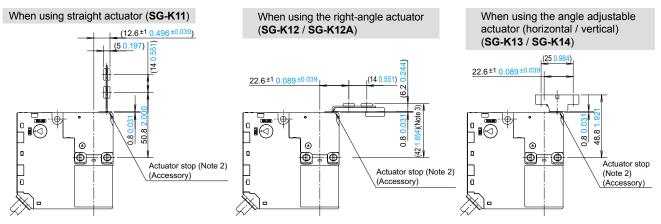


Notes: 2) The actuator stop is used to adjust the actuator position. Remove the actuator stop after the actuator position is mounted. 3) 41.4 1.63 when using **SG-K12**

Actuator mounting reference position

As shown in the figure on the right, the mounting reference position of the actuator when inserted in the safety switch is:

The actuator stop on the actuator lightly touches the safety switch.

* The actuator stop is used to adjust the actuator position. Remove the actuator stop after the actuator position is mounted.

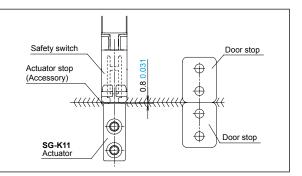

^{*} The tensile strength of the SG-K12 actuator is 100N. If an excessive tensile force is applied, the actuator may fall off the door. When a tensile force exceeding 100N is expected, use the SG-K12A actuator with a plate.



Actuator stop (Note

Dimensions (Unit: mm in)

SG-A1□ Safety door switch Mounting hole layout 20 to 22 0.787 to 0.866 10.4 0.409 (58 2.283) 2-holes for M4 screw (ø4.3 ø0.169 or M4 tapped) *The safety switch can be 15 35 1.378 mounted in two directions. (9.0.354)78 3.071 5.5 0.217 Slot plug (Note 1) Note 1: Plug the unused actuator entry slot using the plug supplied with 27.6 1.08 the switch. When using straight actuator (SG-K11) When using the right-angle actuator When using the angle adjustable actuator (horizontal / vertical) (SG-K12) (SG-K13 / SG-K14) (12.6 ±1 0.496 ±0.039) 30.8 1.2° 22.6± 0.8 0.8

Note 2: The actuator stop is used to adjust the actuator position. Remove the actuator stop after the actuator position is mounted.

Actuator stop (Note 2)

(Accessory)

SG-K11 / SG-K12 Actuator


Actuator stop (Note 2)

(Accessory)

Right-angle actuator (SG-K12) Straight actuator (SG-K11) * The tensile strength of the SG-K12 actuator is 100N. If an excessive tensile force is applied, the actuator 43.2 1.701 may fall off the door. (15.8 0.622) When a tensile force exceeding 100N is expected, use the SG-K12A actuator with a plate. When mounted (33.8 1.331) When mounted (5.6 0.220) 0.8 0.031 mounted When mounted (5 0.197) Actuator stop (Note) 2-ø9 ø0.3 Rubber bushing Rubber bushing 11 2 0 047 Actuator stop (Note)

Note: The actuator stop is used to adjust the actuator position. Remove the actuator stop after the actuator position is mounted.

Actuator mounting hole layout (Straight actuator, right-angle actuator)





Dimensions (Unit: mm in)

SG-K13 / SG-K14 Actuator

Horizontal / vertical angle adjustable actuators (SG-K13)

(Horizontal adjustment)

Orienting 0.8 0.031

Angle adjustment (M3 hexagon-socket-head screw)

Horizontal / vertical angle adjustable actuators (SG-K14)


* The SG-K14 differs from the SG-K13 in that the direction in which the metal parts on the tip of the actuator are embedded is reversed by 180°.


(Horizontal adjustment)



Changes in the orientation of adjustment for angle adjustable (horizontal / vertical) actuators

The orientation of actuator adjustment (horizontal / vertical) can be changed using the orienting insert (white plastic) installed on the back of the actuator. Do not lose the mounting plate.





Angle adjustment (M3 hexagon-socket-head screw)


(Vertical adjustment)

Angle adjustment
(M3 hexagon-socket-head screw)
Actuator stop (Note)
(Accessory)


* The base is made of glass-reinforced PA66 (66 nylon). Angle adjustment screws are stainless steel (SUS). When using adhesive on screws, take material compatibility into consideration.

Note: The actuator stop is used to adjust the actuator position. Remove the actuator stop after the actuator position is mounted.

Actuator mounting hole layout (horizontal / vertical angle adjustable actuators)



· Manual unlocking key (Accessory: plastic)

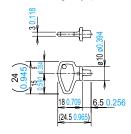

Contact configuration / Operating patterns

	Contact configu		Jeraun	y pallerns		: (Closed : Open
				Status 1	Status 2	Status 3	Rear manual unlock
S	afety switch status			Door closed Machine ready to operate	Door closed Machine cannot be operated	Door open Machine cannot be operated	Door closed Machine cannot be operated
D	oor status						• Press rear unlocking button. (Note 1)
С	ircuit diagram (Example	e: SG-B2-K2 □D	9-L5)	11 12 41 42 21 22 51 52	11 12 100X 1000X 11 41 42 22 51 52	11 12 22 51 52	11 12 41 142 21 22 51 52
D	oor			Closed (locked)	Closed (unlocked)	• Open	Closed (unlocked)
	SG-B2-K2□C-5		Monitor circuit (door closed) 11-12				
	Monitor circuit : → 11 12	LOCK UNLOCK	Monitor circuit (door open) 23-24				
	Monitor circuit : Monitor circuit : 23 24 Monitor circuit :	⊕41	Monitor circuit (locked) 41-42				
tion			Monitor circuit (unlocked) 53-54				
Model No. and contact configuration	SG-B2-K2□D-5		Monitor circuit (door closed) 11-12				
ntact co			Monitor circuit (door closed) 21-22				
and cor	Monitor circuit: \bigcirc 1 1 1 12 Monitor circuit: \bigcirc 21 2	⊕41	Monitor circuit (locked) 41-42				
del No.	Monitor circuit :	→ <u>51</u> + <u>52</u>	Monitor circuit (locked) 51-52				
Mo	SG-B2-K2□D-L5		Monitor circuit (door closed) 11-12				
			Monitor circuit (door closed) 21-22				
	Monitor circuit: → 11 + 12 Monitor circuit: Monitor circuit: → 21 + 22	 41 42	Monitor circuit (locked) 41-42				
	Monitor circuit : Monitor circuit :	→ <u>51</u> <u>52</u>	Monitor circuit (locked) 51-52				

Notes: 1) When the operator is confined in a hazardous area, the actuator can be unlocked manually by pressing the rear unlocking button, which should be accessed easily by the operator.

2) The above contact configuration shows the status when the actuator is inserted and the switch is locked.

3) Monitor circuit: Sends monitoring signals of protective door open / closed status or protective door lock / unlock status.

 Operation character 	istics [:	Contact ON (clos	sed) 🗌 : Contac	t OFF (opened)						
(reference)	nounting referen	ce position)	SG-B2-K2□D-5	. `		mounting refe		position)			
SG-B2-K2□C-5		rox. 5	3.3 0.130 (Lock 3.3 0.209 pprox. 6.9 0.272 Ap) prox. 26.4 1.039 (Travel: mm in)		SG-B2-K2□D-L5		Approx.	c. 3.3 0.130 (I 5.3 0.209 Approx. 6.9 0.272	Appro	ox. 26.4 1.039 Travel: mm in)
Monitor circuit (11-12)				(Travel. IIIIIIIII)		Monitor circuit (11-12)				`	, ,
Monitor circuit (23-24)						Monitor circuit (21-22)					
Monitor circuit (41-42)						Monitor circuit (41-42)					
Monitor circuit (53-54)						Monitor circuit (51-52)					
(Actuator completely inserted) (Actuator pulled out) (Actuator completely inserted) (Actuator pulled out)											

• The characteristics show the contact status when the actuator enters an entry slot of an safety switch.

[•] The characteristics shown in the chart above are of the SG-K21 actuator. For the others actuator, add 1.3 mm 0.051 in.



When connecting the SG-B2 series to a safety circuit, connect the door monitor circuits (11-12) ⊕ and the lock monitor circuits (41-42, 51-52) in series. (GS-ET-19)

SG-B2

25

SG-B2



SG-B2 SERIES

Specifications

	opcomoat	10110								
	Designation	Safety door s	witch v	vith ke	У					
Iter	\ 									
	olicable	EN 1088, IEC 60947								
sta	ndards	GS-ET-19, UL 508,			4					
Α	Standards for use	IEC 60204-1			.0)					
	olicable ectives	Machinery dire Low voltage di								
	Ambient	-25 to +70 °C -13 to +158 °F (No	dew conden	sation or ici	ng allowed)					
illi	temperature	Storage: -40 to +80 °C	-40 to +	176 °F	ng anomou)					
g S	Ambient humidity	45 to 8	5 % RH							
Operating condition	Pollution degree		ide 2)							
	Altitude	2,000 m 6,5	61.68 ft	max.						
	oulse withstand	2.5 kV								
	tage (Uimp) ted insulation									
	tage (Ui)	250 V ((Note 1)							
	<u> </u>	2.5	5 A							
The	ermal current	Ambient temperatur								
(Ith		-25 to +60 °C -13 to								
, -	,	+60 to +65 °C +140								
		+65 to +70 °C +149	30 V	125 V	250 V					
Rat	ted operational	le Ue	- JU V	2.5 A	1.5 A					
	tage (Ue) /	Resistive load (AC-12) Inductive load (AC-15)	-	1.5 A	0.75 A					
	ted operational			1.1 A	0.55 A					
cur	rent (le)	Resistive load (DC-12) Inductive load (DC-13)		0.55 A	0.27 A					
Оре	erating frequency	900 opera								
Actu	ator operating speed	0.05 to 1	.0 m/sec	C .						
B ₁₀		2,000,000 (ISO 13849-1 Annex C Table C.1)								
	chanical ability	1,000,000 operations m Rear unlocking button: 3,000 op			2_R2_⊓_I 5\					
		100,000 operations mir								
	ctrical	1,000,000 operations m								
aur	ability	(900 operations/hour)	` .							
	ctric shock	Class II (IEC 61140) (Not	e 2), 🔲 (d	double-in	sulated)					
pro	tection class									
Inte	erlock force	1,400 N min. (GS-ET-19) (Note 3) (500 N min. : SG-K24 actuator)								
Dir	ect opening	11 mm 0.433 in min. (actuator: SG-K21)								
trav		12 mm 0.472 in min. (for other actuators)								
Dire	ect opening force		l min.							
	ntact resistance	700 mΩ max. (initial va			t cable)					
	tection	IP 65 (IEC 60529)								
	ock resistance	Malfunction: 100 m/s², Destruction: 1,000 m/s² Malfunction: 10 to 55 Hz, half amplitude 0.35 mm 0.014 in								
	ration istance	Destruction: 30 Hz, half amp								
	nditional			111111 0.000						
sho	rt-circuit current	50 A (250 V)							
	ort-circuit	Use 250 V / 10 A fa	ast actin	a type fi	ISE					
	tective device			<u> </u>						
	terial		re: PA66							
Ca	ole Operating	UL style 2464, No).22 AW	G 12-co	re					
	specifications	2 pos	sitions							
	Mechanical	100,000 and	rations	min						
	durability	100,000 operations min.								
	Key operating	10,000 operations min.								
Key	durability	10,000 000								
Ŧ	Key tensile	1.0 N·	m min.							
	strength Direct opening									
	force	0.6 N·	m min.							
	Direct opening	60° min.								
	degree									
	ight	SG-B2-□-5: Approx. 680 g,	SG-B2-□	-L5 : Appro	ox. 700 g					
Noto	e: 1) Patings ann	roved by III c-III : 125 V								


Notes: 1) Ratings approved by UL, c-UL: 125 V

2) Basic insulation of 2.5 kV impulse withstand voltage is ensured between different contact circuits. When both SELV (safety extra low voltage) or PELV (protective extra low voltage) circuits and other circuits (such as 230 V AC circuits) are used for the solenoid power and contact circuits at the same time, the SELV or PELV requirements are not met any more.

3) The actuator locking strength is rated at 1,400 N of static load. Do not apply a load higher than the rated value. When a higher load is expected to work on the actuator, provide an additional system consisting of another safety switch without lock (such as the SG-A1 safety switch) or a sensor to detect door opening and stop the machine.

Precautions for proper use

This catalog is a guide to select a suitable product.
 Be sure to read the instruction manual attached to the product prior to its use.



 If relays are used in the circuit between the safety switch and the load, consider the danger and use safety relays, since welding or sticking contacts of standard relays may invalidate the functions of the safety switch.




- Do not place a PLC in the circuit between the safety switch and the load. Safety and security can be endangered in the event of a malfunction of the PLC.
- Do not disassemble or modify the safety switch, otherwise a breakdown or an accident may occur.
- Do not install the actuator in a location where the human body may come in contact. Otherwise injury may occur.
- Regardless of door types, do not use the safety switch as a door stop. Install a mechanical door stop at the end of the door to protect the safety switch against excessive force.
- Do not apply excessive shock to the safety switch when opening or closing the door. A shock to the safety switch exceeding 1,000 m/s² may cause damage to the safety switch.
- If the operating atmosphere is contaminated, use a protective cover to prevent the entry of foreign objects into the safety switch through the actuator entry slots. Entry of a considerable amount of foreign objects into the safety switch may affect the mechanism of the safety switch and cause a malfunction.
- Cover the unused actuator entry slot using the slot plug supplied with the safety switch.
- Do not store the safety switches in a dusty, humid, or organic-gas atmosphere, or in an area subjected to direct sunlight.
- Use proprietary actuators only. When other actuators are used, the safety switch may be damaged.
 Do not cut, machine, or otherwise modify actuators. Doing so may cause equipment failure.
- Do not open the lid of the safety switch. Loosening the screws may damage the safety switch.
- The locking strength is rated at 1,400 N. Do not apply a load higher than the rated value. When a higher load is expected, provide an additional system consisting of another safety switch without lock or a sensor to detect door opening and stop the machine.
- Regardless of door types, do not use the safety switch as a door lock. Install a separate lock using a latch or other measures.
- Although the SG-K21A / SG-K22A actuators alleviate the shock when the actuator enters the slot on the safety switch, make sure that excessive shock is not applied. If the rubber bushings become deformed or cracked, replace with new ones.




Precautions for proper use

· Do not mount the safety switch facing down as shown in the figure below. Otherwise, the key may fall off due to shock.



Cables

- Do not fasten or loosen the gland at the bottom of the safety switch.
- · When bending the cable during wiring, make sure that the cable radius is kept at 30 mm 1.181 in minimum.
- · When wiring, make sure that water or oil does not enter the cable.
- · Do not open the lid of the safety switch. Otherwise the safety switch will be damaged.

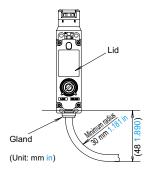


Minimum radius of hinged door

When using the safety switch on hinged doors, refer to the minimum radius of doors shown below. When using on doors with small minimum radius, use the angle adjustable actuator (SG-K24). Note: Because deviation or dislocation of hinged doors may occur in actual applications, make sure of the correct operation before installation.

When using the right-angle actuator (SG-K22)

<When the door hinge is on the extension line of the actuator mounting surface>




<When the door hinge is on the extension line of the safety switch surface>




When using the right-angle actuator (with rubber bushings) (SG-K22A)

<When the door hinge is on the extension line of the actuator mounting surface>



<When the door hinge is on the extension line of the safety switch surface>



Actuator angle adjustment (vertical / horizontal)

· Using the angle adjustment screw (M3 hexagon-socket-head screw), the actuator angle can be adjusted. (refer to the dimensions on page 29)


Adjustable angle: 0 to 20°

- · The larger the adjusted angle of the actuator, the smaller the applicable radius of the door opening. After installing the actuator, open the door. Then adjust the actuator so that its edge can be inserted properly into the actuator entry slot of the safety switch.
- · After adjusting the actuator angle, apply Loctite to the adjustment screw so that the screw will not move.


When using the angle adjustable actuator (SG-K24)

- · When the door hinge is on the extension line of the actuator mounting surface: 70 mm 2.756 in
- When the door hinge is on the extension line of the safety switch surface: 50 mm 1.969 in

<When the door hinge is on the extension line of the actuator mounting surface>

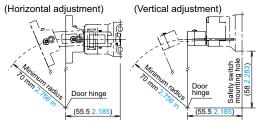


<When the door hinge is on the extension line of the safety switch surface>



Mounting

· Mount the safety switch on a fixed piece of machinery or guard and the actuator on a hinged door.

Avoid mounting both the safety switch and actuator on a hinged door. Doing so may cause equipment failure. For more information about how to mount the devices, see the following diagram:

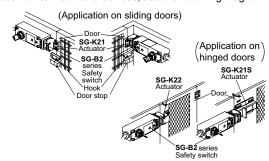

Recommended tightening torque for mounting screws

· Recommended screw tightening torque

	Screw tightening torque
For mounting the safety switch (M4 screw) (Note 1)	1.8 to 2.2 N·m
For mounting the actuator	
(SG-K21: Two M4 screws) (Note 1)	1.8 to 2.2 N·m
(SG-K21A / SG-K22A : Two M4 screws) (Note 1, 2)	1.0 to 1.5 N·m
(SG-K21S: M5 screw) (Note 1)	4.5 to 5.5 N·m
(SG-K22 : Two M4 phillips screws)	0.8 to 1.2 N·m
(SG-K24 : Two M4 screws) (Note 1)	1.0 to 1.5 N·m
For mounting the SG-B2 head (M3)	0.9 to 1.1 N·m
For mounting the manual rear unlocking button (M3 screw with washers)	0.5 to 0.7 N·m

Notes: 1) The above recommended tightening torques of the mounting screws are the values confirmed with hexagon-socket-head bolts. When other screws are used and tightened to a smaller torque, make sure that the screws do not come loose after mounting 2) In the case of SG-K21A or SG-K22A, using two M4

screws and two attached washers, fasten the


actuator securely on the door.

M4 screw Washer Rubber bushing ////Hinged door M4 tapped hole

SG-B2

Dimensions (Unit: mm in)

SG-B2-K2 -5 Door switch

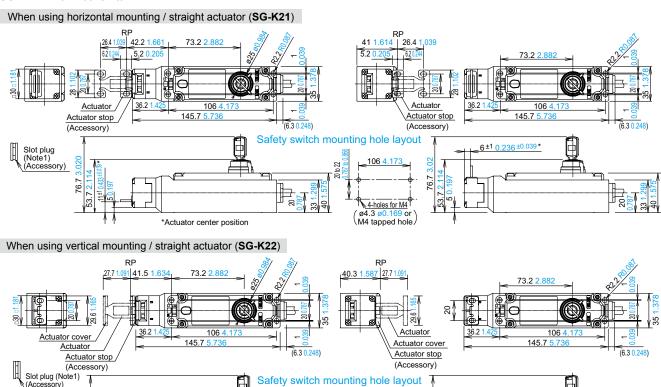

Operation key (Accessory) *Actuator center position


ω.


Notes: 1) Plug the unused actuator entry slot using the plug supplied with the switch.

2) When mounting the safety switch, be sure to conform to the mounting hole dimensions and secure in place with four screws.

4-holes for M4

SG-B2-K□-L5 Door switch (rear unlocking button type)



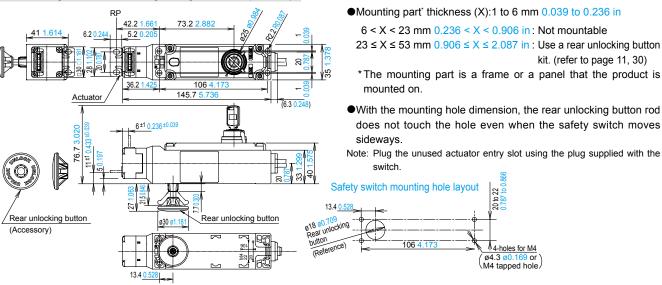


Actuator mounting reference position

As shown in the figure on the right, the mounting reference position of the actuator when inserted in the safety switch is:

The actuator stop on the actuator lightly touches the safety switch.

* The actuator stop is used to adjust the actuator position. Remove the actuator stop after the actuator position is mounted.




Enable grip


Dimensions (Unit: mm in)

SG-K2 Actuator

Right-angle actuator (SG-K22)

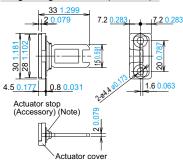

Straight actuator with rubber bushings (SG-K21A)

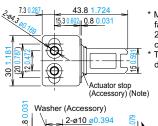


- * Mounting pitch is set to 12 mm 0.472 in in factory. When setting the mounting pitch to 20 mm 0.787 in, widen the pitch of rubber cushions to 20 mm 0.787 in.
- * The actuator has movement flexibility to the directions shown in $\textcircled{\mathbb{B}}.$

Actuator mounting hole layout (Straight actuator with rubber bushings, Right-angle actuator with rubber bushings)



* Mounting pitch can be widened to 20 mm 0.787 in by moving the rubber bushings.

Right-angle actuator with rubber bushings (**SG-K22A**)

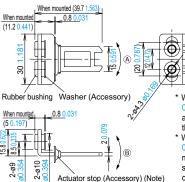


- * When the mounting pitch is 12 mm 0.472 in (factory setting), the actuator has movement flexibility to the directions shown in (a) and (a).


 * When the mounting pitch is 20 mm
- * When the mounting pitch is 20 mm 0.787 in, the actuator has movement flexibility to the directions shown in (®). Side the rubber cushions together with the screws.

Slide actuator (SG-K21S)

Rubber bushing

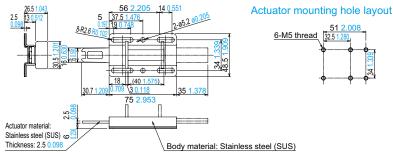


Horizontal / Vertical angle adjustable actuators (SG-K24)

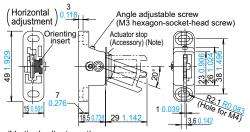


Changes in the orientation of adjustment for angle adjustable (vertical / horizontal) actuators

The orientation of adjustment of angle adjustable (vertical / horizontal) actuators is determined by the position in which the orienting insert (white plastic) is installed on the back of the actuator.

Install the insert according to the desired orientation of adjustment. Exercise care not to lose the orienting insert. The actuator will not operate properly without the orienting insert.

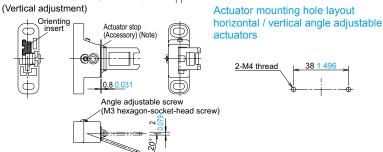


Note: The actuator stop is used to adjust the actuator position. Remove the actuator stop after the actuator position is mounted.

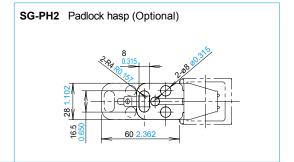

SG-B2


Dimensions (Unit: mm in)

MS-SG21 Mounting plate (Optional)

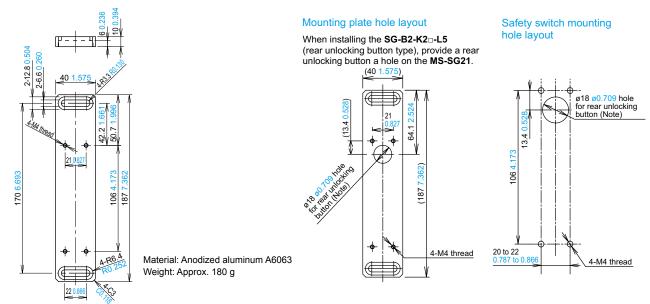

Note: With the mounting hole dimension, the rear unlocking button rod does not touch the hole even when the safety switch moves sideways.

MS-SG-22 / MS-SG-23 Rear unlocking button kit for a frame (Optional)

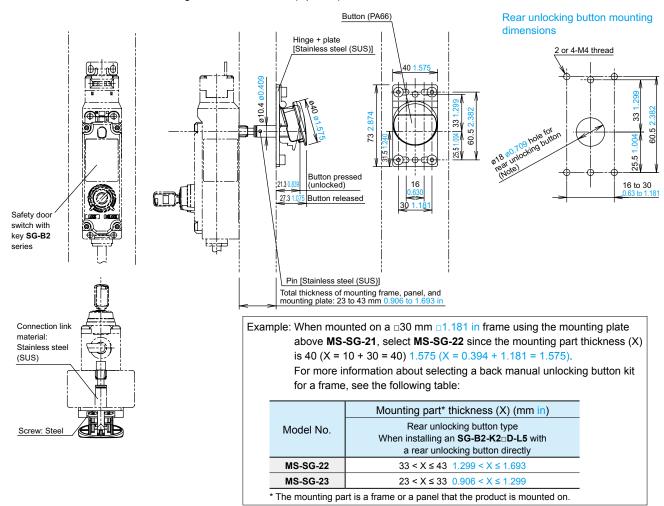

Note: With the mounting hole dimension, the rear unlocking button rod does not touch the hole even when the safety switch moves sideways.

key



Specifications

	opcomean	.01	10											
	Designation		Ena	ble	e grip switc	h								
Ite		SG-C1 series												
	plicable ndards	IEC 60947-5-1, EN 60947-5-1, JIS C 8201-5-1, GS-ET-22, UL 508, CSA C22.2 No.14												
Sia	lidalus	ISO 12100 / EN ISO 12100, IEC 60204-1 / EN 60204-1,												
	Standards for	ISO 11161 / EN ISO11161, ISO 10218-1 / EN ISO 10218-1,												
	use	ANSI/RIA/ISO 10218-1, ANSI/RIA R15.06, ANSI B11.19, ISO 13849-1 / EN ISO 13849-1												
Ap	plicable	Machinery directive (2006/42/EC)												
	ectives	Low voltage directive (2006/95/EC)												
dition	Ambient	-25 to +60 °C -13 to +140 °F (No dew condensation or icing allowed)												
00 f	temperature	Storage: -40 to +80 °C -40 to +176 °F												
Operating condition	Ambient humidity	_	45 to 85 % RH											
Ope	Pollution degree Altitude	\vdash	3 (Inside 2) 2,000 m 6,561.68 ft max.											
	oulse withstand		5 kV (Momenta	ary	pushbutton s		and	key						
	tage (Uimp) ted insulation		lector switch: 0 V (Momentary			h and	kov							
	tage (Ui)	se	lector switch: 12	ри 5 V	/) / Models with	indic	ator:	30 V						
The	ermal current (Ith)				ncy stop swite	h: 5	A)							
		le	3 position	-	Resistive load (AC-12)	_	125 V	250 V 0.5 A						
			enabling switch	PC	Inductive load (AC-15)		0.7 A							
		달	(Terminal No.:	20	Resistive load (DC-12)		0.2 A							
		Grip switch	NO1-C1, NO2-C2)	_	Inductive load (DC-13) Resistive load (AC-12)		0.1 A 2.5 A							
Ra	ted	Grig	Push monitor switch	AC	Inductive load (AC-15)			0.75 A						
ope	erational			20	Resistive load (DC-12)									
	tage (Ue) / ted				Resistive load (AC-12)	2.3 A	0.55 A 5 A	0.27 A 3 A						
оре	erational		ergency stop	A	Inductive load (AC-12)	-		1.5 A						
	current (le) (Note)		tch rminal No. 1-2, 1-2)	2	Resistive load (DC-12)		0.4 A							
(IVC			nentary pushbutton switch	_	Inductive load (DC-13)		0.22 A	0.1 A						
			y selector switch	PC	Resistive load (AC-12)		0.5 A	-						
			minal No. C1_NO1	_	Inductive load (AC-15)	_	0.3 A	-						
			^L NC1, C2⊤NO2,	2	Resistive load (DC-12)	1 A	0.2 A	-						
			LNC2)	Inductive load (DC-13) 0.7 A 0.1 A -										
	ectric shock etection class		Class II (IEC 6	114	10), 🔳 (double	insu	lated)						
•	erating frequency	(Models with indicator: Class III) 1,200 operations/hour												
	. , ,	2,000,000												
B ₁₀	chanical	(ISO 13849-1 Annex C Table C.1) Position 1⇒2⇒1: 1,000,000 operations min.												
	ability	Position 1⇒2⇒3⇒1: 100,000 operations min.												
	ectrical	100,000 operations min. (Rated operating load)												
	ability ock resistance	1,000,000 operations min. (AC / DC 24 V 100 mA) Malfunction: 150 m/s², Destruction: 1,000 m/s²												
	ee fall	1.0 m 3.281 ft 1 time (Based on IEC60068-2-32)												
	ration	Malfunction: 5 to 55 Hz, half amplitude 0.5 mm 0.020 in												
	istance IP66 / IP67	Destruction: 16.7 Hz, half amplitude 1.5 mm 0.059 in Without additional switch and pilot light												
	IP65			_	switch and/or									
	nditional short- cuit current			50	A (250 V)									
	ort-circuit		250.1/40	40	A F (IFO)	040	7.4\							
	tective device		•		A Fuse (IEC6		,							
	ect opening force ect opening travel	_	4.7 mm 0.185 i		ush monitor s			h)						
Actu	ator Strength				in. (Grip swite			.,						
(Ent	ire button is pushed)	_		. 11	(Only Switt	J11)								
Ind	licator (Note)		Green LED Rated Operati	na	Voltage: DC	24 V	±10 °	%						
	()		Rated current:	15	5 mA									
					Approx. 140 (E: Approx. 15									
۱۸/۵	night .				E. Approx. 13 E G : Approx. 1									
vve	eight	SG-C1-21-MM : Approx. 155 g SG-C1-21-EMM : Approx. 165 g												
					EMM: Approx EMK: Approx.									
_														

Note: As for the type with pilot light, Ue (contact ratings) of all switches is only less than 30 V DC, and connect all switches to SELV (safety extra low voltage) or PELV (protective extra low voltage) circuit.

Precautions for proper use


- This catalog is a guide to select a suitable product.
 Be sure to read the instruction manual attached to the product prior to its use.
 - In order to avoid electric shock or fire, turn the power off before installation, removal, wire connection, maintenance, or inspection of the safety switch.
 - Do not disassemble or modify the grip switch.
 - When using the SG-C1 series for safety-related equipment in a control system, refer to the safety standards and regulations in each country and region depending on the application purpose of the actual machines and installations to make sure of correct operation. Also, perform risk assessment to make sure of safety before starting operation.



- Do not tie the grip switch around the button with a tape or string to keep the switch in position 2. Doing so will prevent the grip switch from functioning as designed and is extremely dangerous. Systems that stop operation after the grip has been operated for a certain period of time and require the operator to grip it again are effective in preventing circumvention of the device's intended purpose.
- Please note that permanent installation of the grip switch at the machine is inadmissible.
- Use proper size wires to meet voltage and current requirements.
- Do not apply an excessive shock to the SG-C1 series.
- When wiring, prevent dust, water, or oil from entering the grip switch.
 If used in wet locations, this device must be used with cable
- If used in wet locations, this device must be used with cable suitable for wet locations.
- When multiple safety components are connected in series, the EN ISO 13849-1 performance level will fall due to the deterioration in fault detection functionality.
- The suitability of control systems in which this product has been embedded must be verified in accordance with EN ISO 13849-2.
- SG-C1 series is a device used for enabling a machine (robot, etc.) when teaching the machine in a hazardous area manually.
 Configure the enabling system so that the machine can operate when the switch is in position 2 and an additional "start" is pushed to initiate the operation.
- In order to ensure safety of the control system, connect each pair
 of the contacts of the 3 position enabling switch (terminal No.
 NO1-C1 and NO2-C2) to a discrepancy detection circuit such as
 a safety relay module.
 (ISO13849-1)
- The base and the plastic part of rubber boot frame are made of glass-reinforced ABS / PBT. The rubber boot is made of silicone rubber. The screw is made of iron. When cleaning the SG-C1 series, use a detergent compatible with the materials
- As for momentary pushbutton switch and key selector switch of additional control unit, do not connect NO and NC contacts of a microswitch to different voltages or different power sources to prevent a dead short-circuit.
- Do not operate key selector switch of additional control unit without completely insertion of the key.
- The rubber boot may deteriorate depending on the operating environment and conditions.

Cable glands

- The product includes one cable gland. When purchasing replacements, ensure that they conform to the following dimensional range:
- Dimension diagram




- Waterproofness: Use a cable gland that can maintain performance of IP67 or higher.
- Recommended connector: Model SKINTOP-BS-M16 × 1.5-B (manufactured by LAPP in Germany and imported by K.mecs Co., Ltd.)
- Applicable cable diameter: Outer diameter of 4.5 to 10 mm 0.177 to 0.787 in

SG-C1 SERIES

Precautions for proper use

Wire length inside the grip switch

Wire stripping length	Grin switch						Momentary pushbutton switch / Key selector switch			Emergency stop switch		Indicator	
	NO1	C1	31	32	NO2	C2	С	NO	NC	1	2	+	-
L (mm in)	40 1.575	45 1.772	50 1.969	60 2.362	85 3.346	80 3.150	120 4.724					15 28	

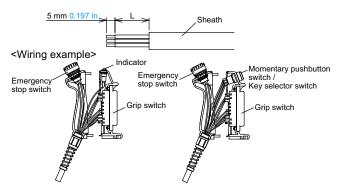

Applicable wire size in terminal

• If direct-mounted: 0.5 mm² (AWG20) or less

Wire **SG-C1** series according to IEC60204-1


Wiring Instruction

Wiring

- Solder the terminal at 310 to 350 °C 590 to 662 °F within 3 seconds using a 60 W soldering iron.
 Sn-Ag-Cu type is recommended when using lead free solder.
- When soldering, do not touch the SG-C1-□ with the soldering iron. Also ensure that no tensile force is applied to the terminal.
 Do not bend the terminal or apply excessive force to the terminal.
- · Use non-corrosive rosin flux.
- Because the terminal spacing is narrow, use protective tubes or heat shrinkable tubes to avoid burning of wire coating or short circuit.
- When using a stranded wire, make sure that adjoining terminals are not short-circuited with protruding core wires.
- Use copper wire 60 to 75 °C 140 to 167 °F only. (UL508)
- The wiring has to be installed according to GS-ET-22, 4.2.6.

Recommended screw tightening torque

Part being secured	Screw position	Screw tightening torque
For mounting rubber boot frame on the base (M4 screw × 4)	А	1.1 to 1.3 N·m
Cable gland to Grip switch Screw	В	2.7 to 3.3 N·m
Cable gland to cable gland	С	2.7 to 3.3 N·m
The R and C values	in the	shove table

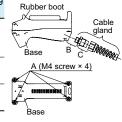



The B and C values in the above table reflect use of the recommended connectors listed above.


When using a cable gland other than the recommended model, check that part's tightening torque.

Dimensions (Unit: mm in)


SG-C1-□ Enable grip switch

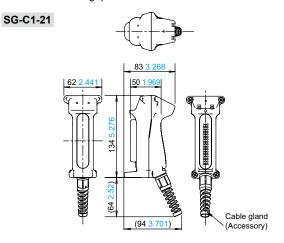

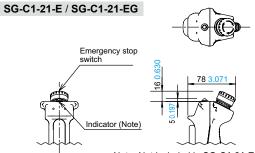


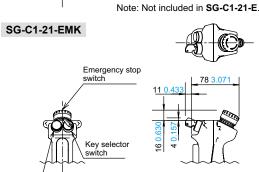

Momentary pushbutton switch

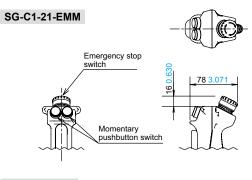





key



Specifications

Designation Pushbutton type emergency stop switch											
Iter	m Series	SG-E1 series									
	plicable ndards	JIS C 8201-5-1, IEC 60947-5-1, EN 60947-5-1, UL 508 (UL listed Certification), CSA 22.2 No.14 (c-UL listed Certification)									
LC	Ambient	-25 to +60 °C -13 to +140 °F (No dew									
Operating condition	temperature	condensation or icing allowed) Storage: -40 to +80 °C -40 to +176 °F									
S gc	Ambient humidity			5 to 8				70 1			
eratir	Pollution degree				3						
Ope	Altitude		2 000 1	m 6 5		8 ft m	nax				
	oulse withstand tage (Uimp)		2,000 m 6,561.68 ft max. 4 kV								
	ted insulation tage (Ui)			60	00 V						
The	rmal current (Ith)			1	0 A						
		le	Ue	24 V	48 V	50 V	110 V	220 V	440 V		
Do	tod		Resistive load (AC-12)	10 A	-	10 A	10 A	6 A	2 A		
	erational tage (Ue) /	AC	Inductive load (AC-15) (A600)	10 A	-	7 A	5 A	3 A	1 A		
оре	erational rent (le)		Resistive load (DC-12)	8 A	4 A	-	2.2 A	1.1 A	-		
		20	Inductive load (DC-13) (P600)	4 A	2 A	-	1.1 A	0.6 A	-		
	ntact istance	50 mΩ max. (initial value)									
	ulation istance		100 MΩ mi	in. (5	00 V	DC n	negg	er)			
	ctric shock tection class		Clas	s II (IEC 6	31140))				
	ervoltage egory		II	(IEC	3066	4-1)					
Re	set action			Turn	rese	et					
Pro	otection		Front of the	Front of the panel: IP65 (IEC 60529)							
Sho	ock resistance	Malfunction: 100 m/s ² , Destruction: 1,000 m/s ²									
	ration istance	Malfunction: 5 to 55 Hz, half amplitude 0.5 mm 0.020 in Destruction: 30 Hz, half amplitude 1.5 mm 0.059 in									
B ₁₀	d		(ISO 1384),000 nnex		le C.	1)			
	chanical ability		500,00	00 ор	eratio	ons m	nin.				
	ectrical ability	50	00,000 operation	ns mi	n. (90	00 op	eratio	ns/ho	our)		
Ma	terial		Actuator: PA	۸6, C	ontac	t blo	ck: P	A66			
	nnecting thod		Terminal screw	/ (M3	.5 ph	ilips	& flat	head)		
App	plicable wire e	N	lax. 2 mm² (Sir	ngle o 2 wire			ø0.06	3 ma	ıx.)		
	ntening torque of terminal screws		1	.0 to	1.3 N	l·m					
	htening torque he locking ring			2.0	N·m						
We	eight	SG-E1-02-□: Approx. 60 g, SG-E1-12-□: Approx. 75 g									
Acc	cessory	Lever lock: 1 pc									


Precautions for proper use



 In order to avoid electric shock or fire, turn the power off before installation, removal, wire connection, maintenance, or inspection of the safety switch.
 Use wiring that is appropriate for the applied.

 Use wiring that is appropriate for the applied voltage and energized current, and tighten terminal screws (M3.5) to the recommended tightening torque (1.0 to 1.3 N·m). Using the switch when the screws are loose will cause it to become extremely hot, posing the risk of fire.

Mounting hole layout / minimum mounting center

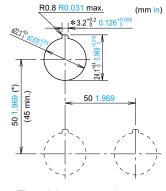


Note:
When using the safety lever lock,
determine the vertical spacing* in
consideration of convenience for
installing and removing the safety
lever lock. (Recommended vertical
spacing: 100 mm 3.937 in or more)

The 3.2% 2.0.126% recess is for preventing rotation and not necessary when anti-rotation is not used. When anti-rotation is not required or when the panel cut-out does not have anti-rotation recess, remove the "Projection" using pliers.

 The minimum mounting centers are applicable to switches with one layer of contact blocks (two contact blocks).
 When two layers of contact blocks are mounted, determine the minimum mounting centers in consideration of convenience for wiring.


Applicable wiring

- (1) The applicable wire size is 2 mm² maximum. (single wire ø1.6 mm ø0.063 in maximum) One or two wires can be connected.
- Applicable crimping terminal (Unit: mm in) When using direction (A)

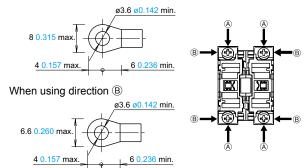

Be sure to use an insulation tube or cover on the crimping part of the crimping terminal to prevent electrical shocks.

• Single wire (Unit: mm in)



Note: When connecting wires to contact blocks or transformers in the direction (B), keep the insulation stripping length 6.6 mm 0.260 in at the maximum.

(2) Tighten the M3.5 terminal screws to a torque of 1.0 to 1.3 $\mbox{N}\cdot\mbox{m}.$

Using the lever lock

 Panasonic Industrial Devices SUNX strongly recommends using the lever lock (yellow) to prevent heavy vibration or maintenance personnel from unlocking the contact assembly.

SG-E1



Dimensions (Unit: mm in)

SG-E1
Emergency stop switch

Rubber gasket

Locking lever (Note)

Locking ring

Dummy block

Terminal screw

M3.5

3 contact blocks

2 contact blocks


2 contact blocks

69.4 2.732 (3 contact blocks)

3 2 1.260


Note: Please attach the lever lock (yellow) after locking to prevent personnel from forgetting to lock the lock lever.

SG-E1-D-E SEMI emergency off (EMO) switch

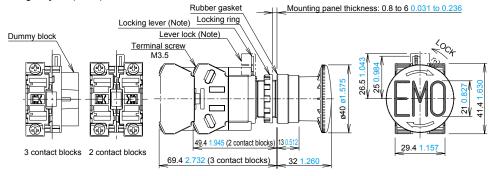


Note: Please attach the lever lock (yellow) after locking to prevent personnel from forgetting to lock the lock lever.


SG-EP□ Emergency stop nameplate (Optional)

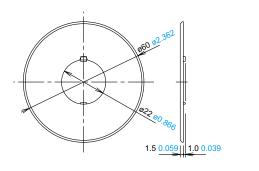

SG-ET1 Locking ring wrench (Optional)




MS-SG-GR1 SEMI guard ring (Optional)

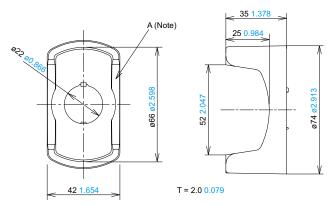

Note: When anti-rotation is not required or when the panel cut-out does not have an anti-rotation recess, remove part "A" of the SEMI guard ring using pliers.

Height of SEMI emergency off (EMO) switch and SEMI guard ring As illustrated below, the height of the SEMI emergency off (EMO) switch and SEMI guard ring should be 3 mm 0.118 in or less.

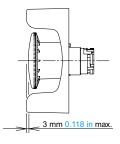

Note

The EMO switch and the guard ring have been designed for applications in semiconductor manufacturing equipment only. Do not use EMO switch and/or the guard ring which are installed on machine tools or food processing machines.

(Machinery Directive of the European Commission and IEC 60204-1 require that emergency stop switches be installed in a readily accessible area and the usage of switch guards is not permitted.)



Specifications

	Designation		Kovis	مام	ctor	SWit	ch				
Iten	\	Key selector switch SG-D1 series									
App	olicable endards	JIS C 8201-5-1, IEC 60947-5-1, EN 60947-5-1, UL 508 (UL listed Certification), CSA 22.2 No.14 (c-UL listed Certification)									
condition	Ambient temperature	-25 to +60 °C -13 to +140 °F (No dew condensation or icing allowed) Storage: -40 to +80 °C -40 to +176 °F									
Operating condition	Ambient humidity Pollution degree		45 to 85 % RH 3								
Imp	Altitude ulse withstand age (Uimp)		2,000 m 6,561.68 ft max. 4 kV								
Rat	ed insulation age (Ui)			60	00 V						
Ther	rmal current (Ith)				0 A						
		le	Resistive load (AC-12)	24 V 10 A			110 V 10 A	220 V 6 A	440 V 2 A		
	rational age (Ue) /	AC	Inductive load (AC-15) (A600)	10 A	-	7 A	5 A	3 A	1 A		
ope	erational rent (le)	O	Resistive load (DC-12)	8 A	4 A	-	2.2 A	1.1 A	-		
		DC	Inductive load (DC-13) (P600)	4 A	2 A	-	1.1 A	0.6 A	-		
resi	ntact stance	50 mΩ max. (initial value)									
resi	ulation stance		100 MΩ mi	in. (50	00 V	DC n	negg	er)			
prot	ctric shock tection class		Clas	s II (I	IEC 6	31140))				
cate	ervoltage egory tection		Front	(IEC			965				
	ock resistance	Ma	alfunction: 100					.000 ו	m/s²		
	ration stance		Ifunction: 5 to 55 I struction: 30 Hz, h								
B _{10d}	l		(ISO 1384		0,000 nnex		le C.	1)			
dura	chanical ability		100,00	00 op	eratio	ons m	nin.				
dura	ctrical ability	100,000 operations min. (1,200 operations/hour)									
Cor	erial nnecting thod		Actuator: PA)		
	licable wire	N	lax. 2 mm² (Sir	ngle o			ø0.06	3 ma	ıx.)		
	tening torque of terminal screws		1	.0 to	1.3 N	l·m					
	tening torque of ocking ring			2.0	N∙m						
Minin	ector behavior num direct opening				sition 00°	S					
Min	imum direct	0.4 N·m									
Max	ning torque kimum ration angle			9	0°						
Wei		SG-D1-2□11: Approx. 75 g, SG-D1-2□22: Approx. 95 g									
Acc	essory			Key: 2pcs., Lever lock: 1 pc.							


Precautions for proper use



· In order to avoid electric shock or fire, turn the power off before installation, removal, wire connection, maintenance, or inspection of the safety switch.

· Use wiring that is appropriate for the applied voltage and energized current, and tighten terminal screws (M3.5) to the recommended tightening torque (1.0 to 1.3 N·m). Using the switch when the screws are loose will cause it to become extremely hot, posing the risk of fire.

Mounting hole layout / minimum mounting center

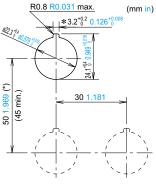


Note: When using the safety lever lock, determine the vertical spacing* in consideration of convenience for installing and removing the safety lever lock. (Recommended vertical spacing: 100 mm 3.937 in or more)

The $3.2^{+0.2}_{0} \ 0.126^{+0.008}_{0}$ recess is for preventing rotation and not necessary when anti-rotation is not used.

· The minimum mounting centers are applicable to switches with one layer of contact blocks (two contact blocks). When two layers of contact blocks are mounted, determine the minimum mounting centers in consideration of convenience for wiring.


Applicable wiring

- (1) The applicable wire size is 2 mm² maximum. (single wire ø1.6 mm Ø0.063 in maximum) One or two wires can be connected.
- Applicable crimping terminal (Unit: mm in) When using direction (A)

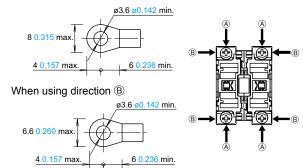

Be sure to use an insulation tube or cover on the crimping part of the crimping terminal to prevent electrical shocks.

• Single wire (Unit: mm in)



Note: When connecting wires to contact blocks or transformers in the direction ®, keep the insulation stripping length 6.6 mm 0.260 in at the maximum.

(2) Tighten the M3.5 terminal screws to a torque of 1.0 to 1.3 N·m.

Using the lever lock (accessory)


· Please attach the lever lock (yellow) after locking to prevent personnel from forgetting to lock the lock lever.

35




Dimensions (Unit: mm in)

SG-D1-□ Key selector switch

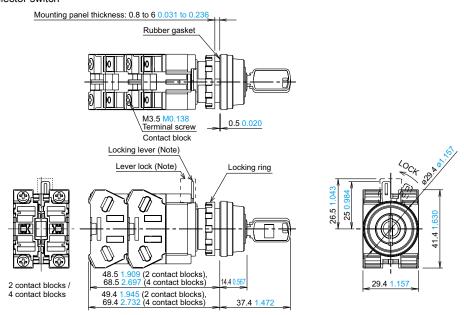

Note: Please attach the lever lock (yellow) after locking to prevent personnel from forgetting to lock the lock lever.

SG-ET1 Locking ring wrench (Optional)



Please contact

Panasonic Industrial Devices SUNX Co., Ltd.

2431-1 Ushiyama-cho, Kasugai-shi, Aichi, 486-0901, Japan Global Sales Department
■Telephone: +81-568-33-7861 ■Facsimile: +81-568-33-8591 panasonic.net/id/pidsx/global



All Rights Reserved @Panasonic Industrial Devices SUNX Co., Ltd. 2013