

Compact String Pot • Voltage Divider Output

Linear Position to 50 inches (1270 mm) Low-Cost, Long Life • Rugged Polycarbonate Enclosure 40-in. Electrical Cable • Free-Release Tolerant In Stock for Quick Delivery!



Part No.	full stroke range	accuracy (% of f.s.)	cycle life
SP2-4	4.75 in (120 mm)	1.00%	2.5M cycles
SP2-12	12.5 in (317 mm)	0.25%	500K cycles
SP2-25	25 in (635 mm)	0.25%	500K cycles
SP2-50	50 in (1270 mm)	0.25%	250K cycles

COMPLETE SPECIFICATIONS


Full Stroke Range Options	0-4.75, 0-12.5, 0-25, 0-50 inches
Output Signal	voltage divider (potentiometer)
Accuracy	±0.25 to ±1.00% (see part no. above)
Repeatability	± 0.05% full stroke
Resolution	essentially infinite
Measuring Cable	0.019-in. dia. nylon-coated stainless steel
Measuring Cable Tension	7 oz. (1,9 N) ±25%
Maximum Cable Acceleration	15 g
Enclosure Material	polycarbonate
Sensor	plastic-hybrid precision potentiometer
Weight	5 oz. (w/o mounting bracket) max.


ELECTRICAL

Input Resistance		10K ohms, ±10%	
Power Rating, Watts		2.0 at 70°F derated to 0 at 250°	
Recommended Maximum Input Voltage		30 V (AC/DC)	
Output Signal Change Over Full Stroke Range 94% ±4% of input voltage			
Electrical Connection	40-inch long, 24 gua	age shielded electical cable	

ENVIRONMENTAL

Enclosure	IP 50
Operating Temperature	0° to 160°F (-18° to 71°C)
Vibration	up to 10 g to 2000 Hz maximum

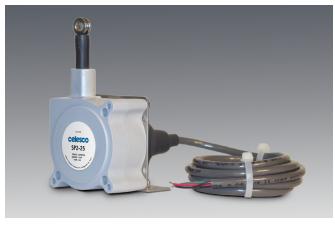


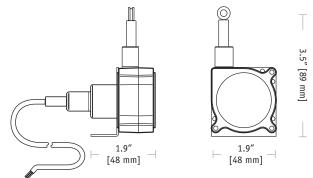

The SP2 String Pot from Celesco is a compact, economical and water resistant device that utilizes a flexible cable, a spring-loaded spool and a potentiometer to detect and measure linear position.

The SP2 is identical to the SP1 except for an added 40-inch electrical cable with a watertight rubber strain relief. The SP2 has been compactly designed for tight spaces and high cycle applications and generously allows for measuring cable misalignment. With 4 different ranges and a handy mounting bracket, the SP2 is a perfect solution for many applications from light industrial to OEM.

Output Signal:

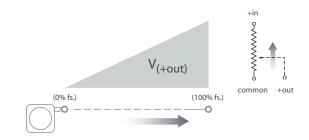

20630 Plummer Street • Chatsworth, CA 91311 tel: 800.423.5483 • +1.818.701.2750 • fax: +1.818.701.2799


Mounting Options:


For accounting a phase a page and a phase a page a phase a pha

To change measuring cable direction simply remove the 3 bracket attaching screws and rotate sensor body to desired direction.


For added flexibilty, mounting bracket can easily be switched to the opposite side.

Electrical Connection:

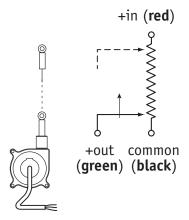

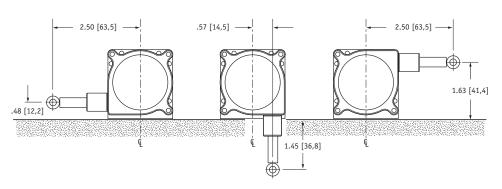

Outline Drawing (w/o bracket):

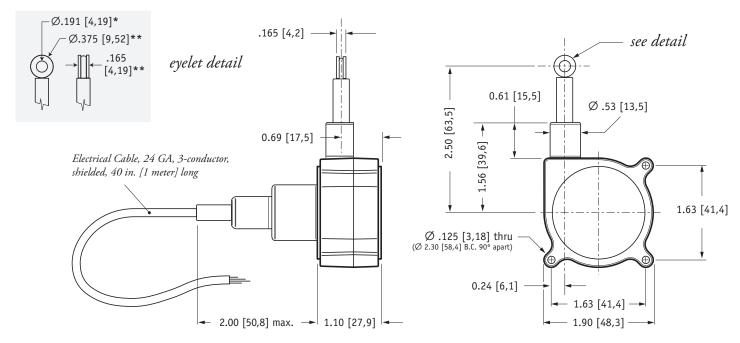


DIMENSIONS ARE IN INCHES [MM] tolerances are 0.04 IN. [1,0 MM] unless otherwise noted.




^{*} tolerance = +.005 -.001 [+0,1 -0,0]

^{**} tolerance = +.005 -.005 [+0,1 -0,1]

Outline Drawing (with bracket):

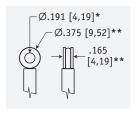

eyelet detail

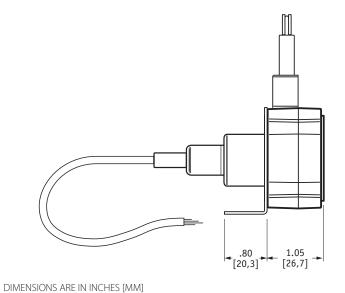

.78 [19,9] - .57 [14,5] see detail 2.50 [63,5] 2.00 [50,8] ─ 1.90 [48,3] **─**► * tolerance = +.005 -.001 [+0,1 -0,0]

.38 [9,7]

- 1.40 [35,6]

mounting holes Ø.144 [3,7] (2 plcs)

** tolerance = +.005 -.005 [+0,1 -0,1]

version: 6.0 last updated: February 26, 2013

tolerances are 0.04 IN. [1,0 MM] unless otherwise noted.